

StarWind Virtual SAN: Configuration Guide for Proxmox Virtual Environment [KVM], StarWind Deployed as a Controller VM using Web UI

2026

TECHNICAL PAPERS



Trademarks

“StarWind”, “StarWind Software” and the StarWind and the StarWind Software logos are registered trademarks of StarWind Software. “StarWind LSFS” is a trademark of StarWind Software which may be registered in some jurisdictions. All other trademarks are owned by their respective owners.

Changes

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, StarWind Software assumes no liability resulting from errors or omissions in this document, or from the use of the information contained herein. StarWind Software reserves the right to make changes in the product design without reservation and without notification to its users.

Technical Support and Services

If you have questions about installing or using this software, check this and other documents first - you will find answers to most of your questions on the [Technical Papers](#) webpage or in [StarWind Forum](#). If you need further assistance, please [contact us](#).

About StarWind

StarWind is a pioneer in virtualization and a company that participated in the development of this technology from its earliest days. Now the company is among the leading vendors of software and hardware hyper-converged solutions. The company's core product is the years-proven StarWind Virtual SAN, which allows SMB and ROBO to benefit from cost-efficient hyperconverged IT infrastructure. Having earned a reputation of reliability, StarWind created a hardware product line and is actively tapping into hyperconverged and storage appliances market. In 2016, Gartner named StarWind “Cool Vendor for Compute Platforms” following the success and popularity of StarWind HyperConverged Appliance. StarWind partners with world-known companies: Microsoft, VMware, Veeam, Intel, Dell, Mellanox, Citrix, Western Digital, etc.

Copyright ©2009-2018 StarWind Software Inc.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of StarWind Software.

Annotation

Relevant products

This guide applies to StarWind Virtual SAN, StarWind Virtual SAN Free (starting from version 1.2xxx – Oct. 2023) and Proxmox version 8 and version 9

Purpose

This document outlines how to configure a Proxmox Cluster using StarWind Virtual SAN (VSAN), with VSAN running as a Controller Virtual Machine (CVM). The guide includes steps to prepare Proxmox hosts for clustering, configure physical and virtual networking, and set up the Virtual SAN Controller Virtual Machine.

For more information about StarWind VSAN architecture and available installation options, please refer to the [StarWind Virtual \(VSAN\) Getting Started Guide](#).

Audience

This technical guide is intended for storage and virtualization architects, system administrators, and partners designing virtualized environments using StarWind Virtual SAN (VSAN).

Expected result

The end result of following this guide will be a fully configured high-availability Proxmox Cluster that includes virtual machine shared storage provided by StarWind VSAN.

Prerequisites

StarWind Virtual SAN system requirements

Prior to installing StarWind Virtual SAN, please make sure that the system meets the requirements, which are available via the following link:

<https://www.starwindsoftware.com/system-requirements>

Recommended RAID settings for HDD and SSD disks:


<https://knowledgebase.starwindsoftware.com/guidance/recommended-raid-settings-for-hdd-and-ssd-disks/>

Please read StarWind Virtual SAN Best Practices document for additional information:


<https://www.starwindsoftware.com/resource-library/starwind-virtual-san-best-practices>

Solution diagram

The diagrams below illustrate the network and storage configuration of the solution:

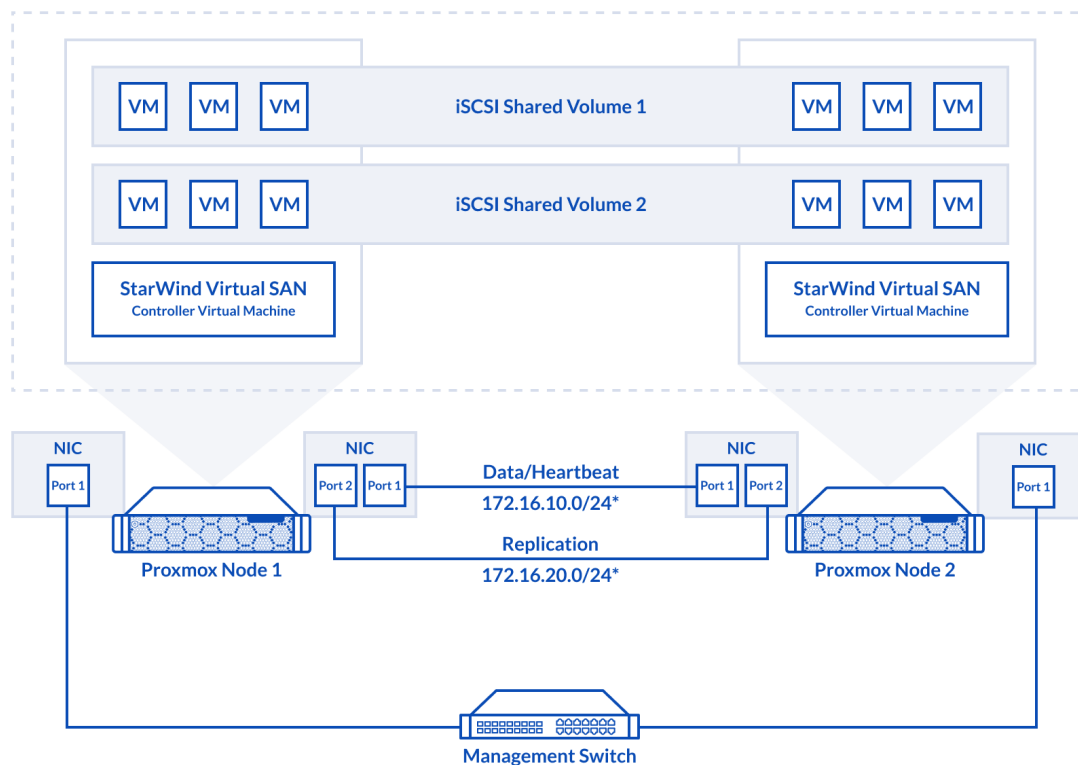

2-node cluster

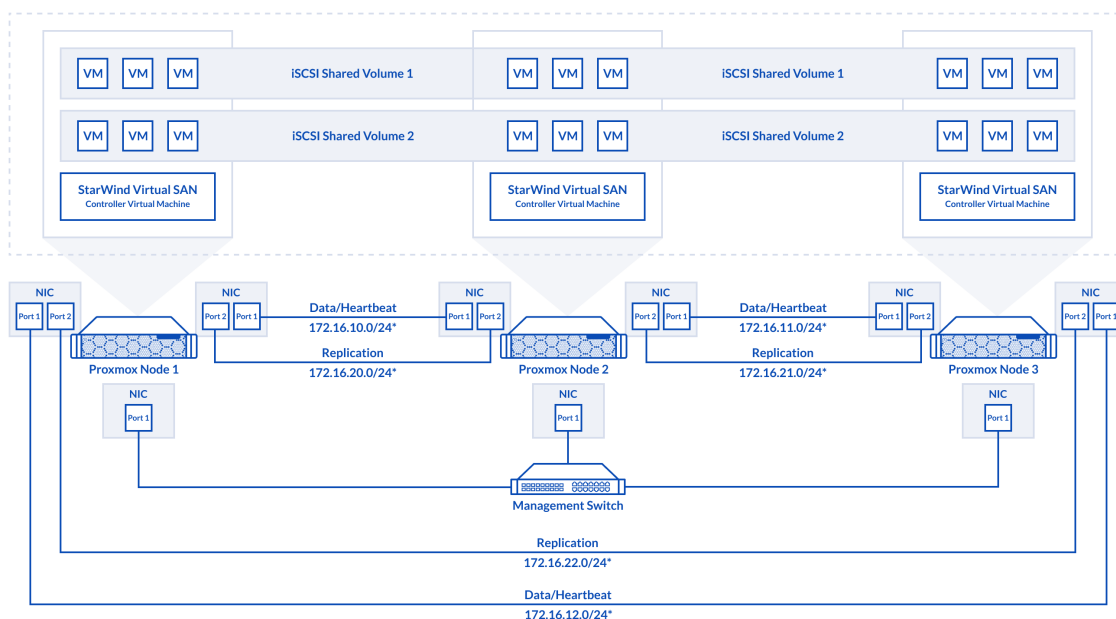

3-node cluster

Preconfiguring cluster nodes

1. Proxmox cluster should be created before deploying any virtual machines.
2. 2-nodes cluster requires quorum. iSCSI/SMB/NFS cannot be used for this purposes. QDevice-Net package must be installed on 3rd Linux server, which will act as a witness.
https://pve.proxmox.com/wiki/Cluster_Manager#_corosync_external_vote_support
3. Install qdevice on witness server:

```
ubuntu# apt install corosync-qnetd
```


4. Install qdevice on both cluster nodes:

```
pve# apt install corosync-qdevice
```


5. Configure quorum running the following command on one of the Proxmox node (change IP address)

```
pve# pvecm qdevice setup %IP_Address_Of_Qdevice%
```

6. Configure network interfaces on each node to make sure that Synchronization and iSCSI/StarWind heartbeat interfaces are in different subnets and connected according to the network diagram above. In this document, 172.16.10.x subnet is used for iSCSI/StarWind heartbeat traffic, while 172.16.20.x subnet is used for the Synchronization traffic. Choose node and open System -> Network page.

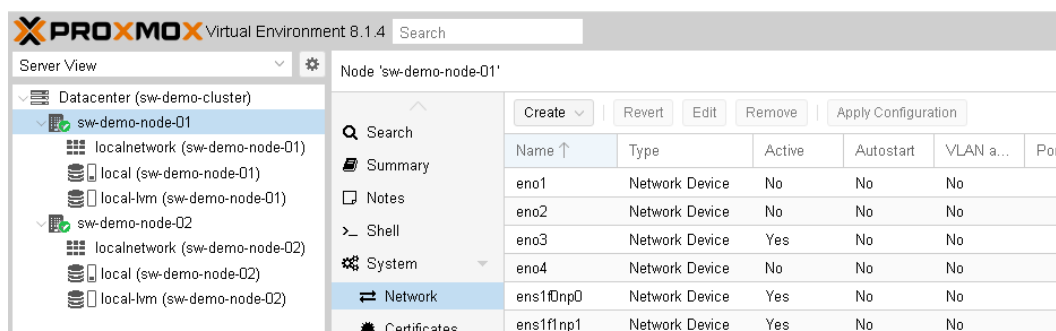

7. Click Create. Choose Linux Bridge.

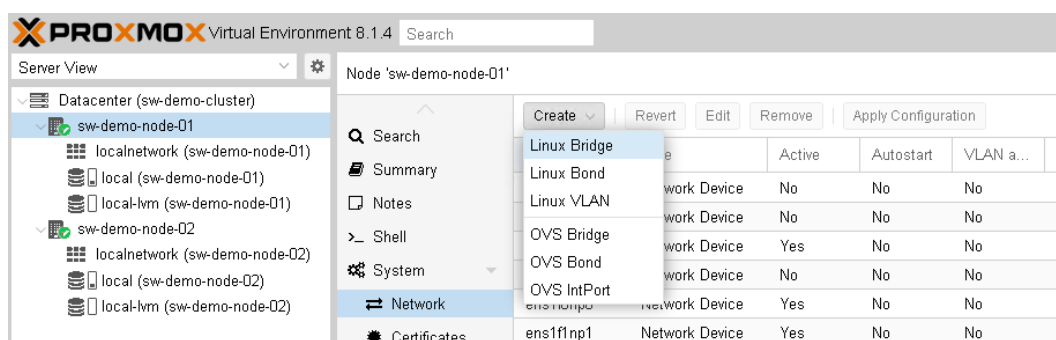

8. Create

Linux Bridge and set IP address. Set MTU to 9000. Click Create.

NOTE: In case of MTU is changed on the bridge to 9000, please make sure that it's changed on the corresponding adapters. Ping the IP address of the partner node using the command: `ping -M do -s 8000 172.16.10.2`

Create: Linux Bridge

Name:
vmbr1

IPv4/CIDR:
172.16.10.1/24

Gateway (IPv4):

IPv6/CIDR:

Gateway (IPv6):

Autostart:
☒

VLAN aware:
☐

Bridge ports:
ens1f0np0

Comment:

MTU:
9000

Help

Advanced ☒

Create

9. Repeat step 8 for all network adapters, which will be used for Synchronization and iSCSI/StarWind heartbeat traffic.

10. Verify network configuration in /etc/network/interfaces file. Login to the node via SSH and check the contents of the file.

```
auto lo
iface lo inet loopback

iface enpls0 inet manual

iface enp7s0 inet manual
    mtu 9000
iface enp8s0 inet manual
    mtu 9000
auto vmbr0
iface vmbr0 inet static
    address 172.16.2.37/24
    gateway 172.16.2.1
    bridge-ports enpls0
    bridge-stp off
    bridge-fd 0

auto vmbr1
iface vmbr1 inet static
    address 172.16.10.1/24
    bridge-ports enp7s0
    bridge-stp off
    bridge-fd 0
    mtu 9000

auto vmbr2
iface vmbr2 inet static
    address 172.16.20.1/24
    bridge-ports enp8s0
    bridge-stp off
    bridge-fd 0
    mtu 9000
-- INSERT --
```

11. Enable IOMMU support in kernel, if PCIe passthrough will be used to pass RAID Controller, HBA or NVMe drives to the VM. Update grub configuration file.

For Intel CPU:

Add "intel_iommu=on iommu=pt" to GRUB_CMDLINE_LINUX_DEFAULT line in /etc/default/grub file.

For AMD CPU:

Add "iommu=pt" to GRUB_CMDLINE_LINUX_DEFAULT line in /etc/default/grub file.

```

root@sw-demo-node-01:~# cat /etc/default/grub
# If you change this file, run 'update-grub' afterwards to update
# /boot/grub/grub.cfg.
# For full documentation of the options in this file, see:
#   info -f grub -n 'Simple configuration'

GRUB_DEFAULT=0
GRUB_TIMEOUT=5
GRUB_DISTRIBUTOR=`lsb_release -i -s 2> /dev/null || echo Debian`
GRUB_CMDLINE_LINUX_DEFAULT="quiet intel_iommu=on iommu=pt"
GRUB_CMDLINE_LINUX=""

# If your computer has multiple operating systems installed, then you
# probably want to run os-prober. However, if your computer is a host
# for guest OSes installed via LVM or raw disk devices, running
# os-prober can cause damage to those guest OSes as it mounts
# filesystems to look for things.
#GRUB_DISABLE_OS_PROBER=false

# Uncomment to enable BadRAM filtering, modify to suit your needs
# This works with Linux (no patch required) and with any kernel that obtains
# the memory map information from GRUB (GNU Mach, kernel of FreeBSD ...)
#GRUB_BADRAM="0x01234567,0xfefefefe,0x89abcdef,0xefefefef"

# Uncomment to disable graphical terminal
#GRUB_TERMINAL=console

# The resolution used on graphical terminal
# note that you can use only modes which your graphic card supports via VBE
# you can see them in real GRUB with the command `vbeinfo'
#GRUB_GFXMODE=640x480

# Uncomment if you don't want GRUB to pass "root=UUID=xxx" parameter to Linux
#GRUB_DISABLE_LINUX_UUID=true

# Uncomment to disable generation of recovery mode menu entries
#GRUB_DISABLE_RECOVERY="true"

# Uncomment to get a beep at grub start
#GRUB_INIT_TUNE="480 440 1"
root@sw-demo-node-01:~# █
  
```

12. Reboot the host.

13. Repeat steps 6-12 an all nodes.

Deploying Starwind Virtual San Cvm

1. Download StarWind VSAN CVM

KVM: <https://www.starwindsoftware.com/vsan#download>


2. Extract the VM CVM.qcow2 file from the downloaded archive.

3. Upload CVM.qcow2 file to the Proxmox Host via any SFTP client (e.g. WinSCP) to /root/

directory.

/root/					
Name	Size	Changed	Rights	Owner	
..		2/26/2024 8:35:01 AM	rw-r--r--	root	
CVM-0.qcow2	10,614,3...	3/18/2024 6:13:02 AM	rw-r--r--	root	

4. Create a VM without OS. Login to Proxmox host via Web GUI. Click Create VM.

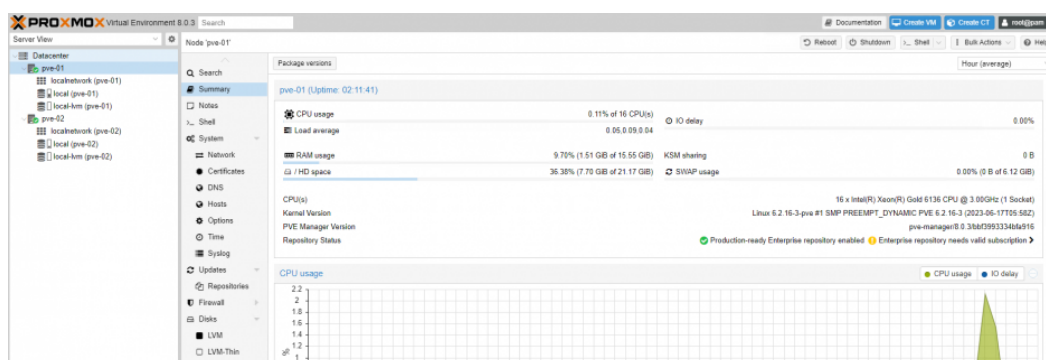

5. Choose node to create VM. Enable Start at boot checkbox and set Start/Shutdown order to 1. Click Next.

Create: Virtual Machine

General

OS

System

Disks

CPU

Memory

Network

Confirm

Node: sw-demo-node-01

Resource Pool:

VM ID: 100

Name: CVM01

Start at boot: ☒

Start/Shutdown order: 1

Startup delay: default

Shutdown timeout: default

Tags

No Tags +

Help

Advanced ☒

Back

Next

6. Choose Do not use any media and choose Guest OS Linux. Click Next.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

☐ Use CD/DVD disc image file (iso)

Storage: local
ISO image:

☐ Use physical CD/DVD Drive

☒ Do not use any media

Guest OS:

Type: Linux
Version: 6.x - 2.6 Kernel

Advanced
Back
Next

6. Specify system options. Choose Machine type q35 and check the Qemu Agent box. Click Next.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

Graphic card: Default
SCSI Controller: VirtIO SCSI single

Machine: q35
Qemu Agent: ☒

Firmware
BIOS: Default (SeaBIOS)
Add TPM: ☐

Help
Advanced
Back
Next

7. Remove all disks from the VM. Click Next.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

No Disks

Add

Advanced ☐
Back
Next

8. Assign at least 8 cores to the VM and choose Host CPU type. Click Next.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

Sockets: 1
Type: host
Cores: 8
Total cores: 8

Help
Advanced ☐
Back
Next

9. Assign at least 8GB of RAM to the VM. Click Next.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

Memory (MiB):

Help
Advanced
Back
Next

10. Configure Management network for the VM. Click Next.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

☐ No network device

Bridge:
Model:

VLAN Tag:
MAC address:

Firewall:
☒

Help
Advanced
Back
Next

11. Confirm settings. Click Finish.

Create: Virtual Machine

General
OS
System
Disks
CPU
Memory
Network
Confirm

Key ↑	Value
agent	1
cores	8
cpu	host
ide2	none,media=cdrom
machine	q35
memory	8192
name	CVM01
net0	virtio,bridge=vmbr0,firewall=1
nodename	sw-demo-node-01
numa	0
onboot	1
ostype	l26
scsihw	virtio-scsi-single
sockets	1

☐ Start after created

Advanced ☐
Back
Finish

NOTE: Make sure that the VM number is noted before proceeding with the next step.

12. Connect to Proxmox host via SSH. Attach CVM.qcow2 file to the VM.

```
qm importdisk 100 /root/CVM.qcow2 local-lvm
```

13. Open VM and go to Hardware page. Add unused SCSI disk to the VM.


14. Attach Network interfaces for Synchronization and iSCSI/Heartbeat traffic.

Add: Network Device


Bridge:
vmbr2
Model:
VirtIO (paravirtualized)
VLAN Tag:
no VLAN
MAC address:
auto
Firewall:
☒

? Help
Advanced ☐
Add

15. Open Options page of the VM. Select Boot Order and click Edit.

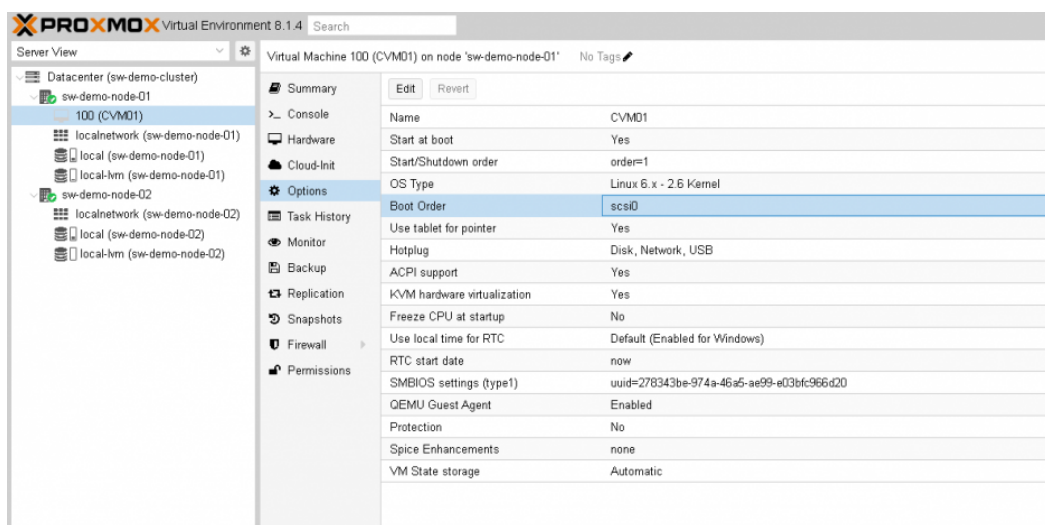

16. Move scsi0 device as #1 to boot from.

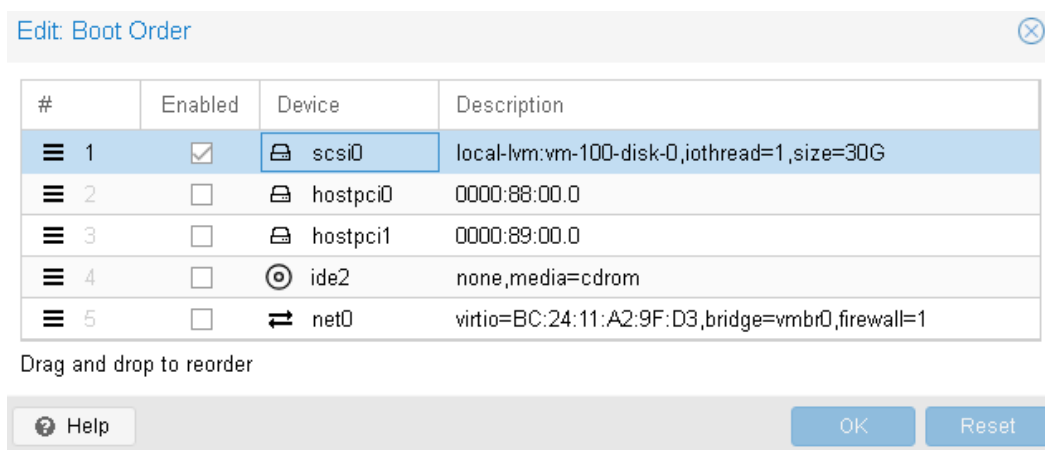


17. Repeat all the steps from this section on other Proxmox hosts.

Attaching Storage To Starwind Virtual San Cvm

Please follow the steps below to attach desired storage type to the CVM

Attaching Virtual Disk To Starwind Virtual San Cvm

1. Open VM Hardware page in Proxmox and add drive to the VM, which going to be used by StarWind service. Specify size of the Virtual disk and click OK.

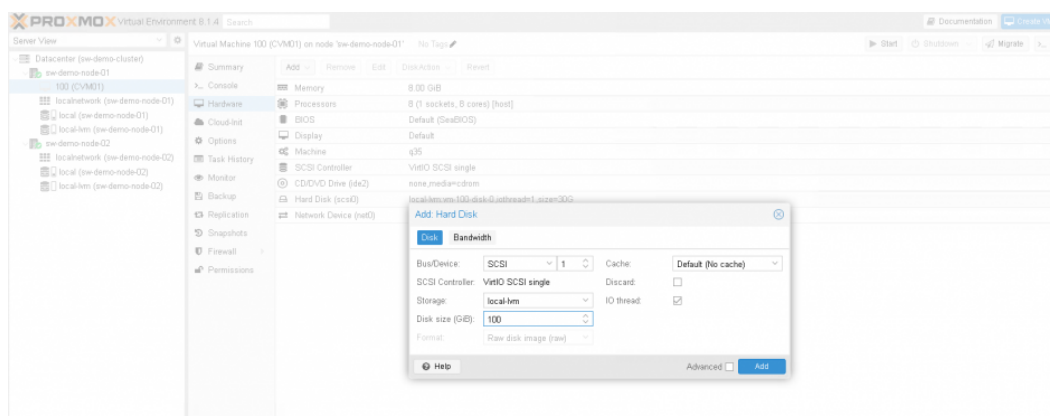


Note. It is recommended to use VirtIO SCSI single controller for better performance. If multiple virtual disks are needed to be used in a software RAID inside of the CVM, VirtIO SCSI controller should be used.

2. Repeat step 1 to attach additional Virtual Disks.
3. Start VM.
4. Repeat steps 1-2 on all nodes.


Attaching Pcie Device To Starwind Virtual San Cvm

1. Shutdown StarWind VSAN CVM.
2. Open VM Hardware page in Proxmox and click Add -> PCI Device.

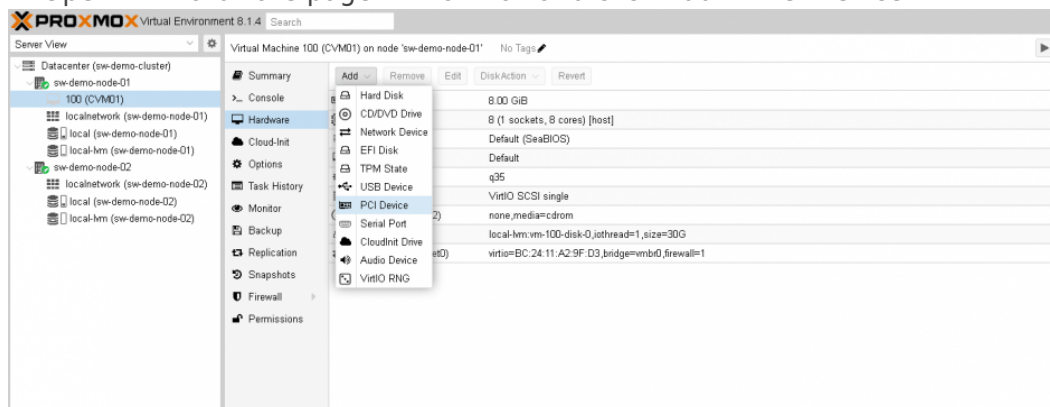

3. Choose

PCIe Device from drop-down list.

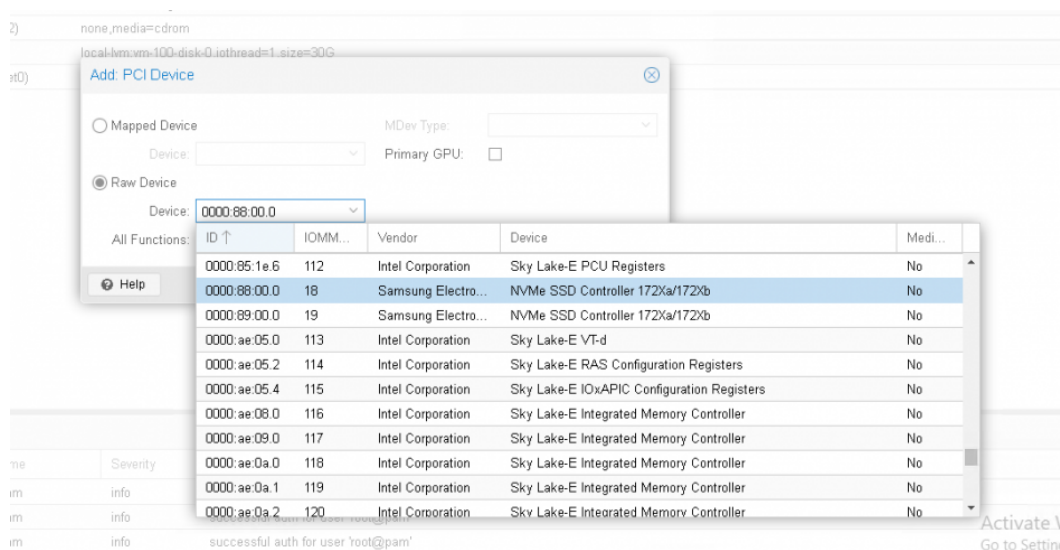

4. Click Add.

Add: PCI Device

☐ Mapped Device MDev Type:

Device:

☒ Raw Device

Device:

All Functions: ☐

 Advanced ☐

5. Edit Memory. Uncheck Ballooning Device. Click OK.

Edit: Memory

Memory (MiB):

Minimum memory (MiB):

Shares:

Ballooning Device: ☐

 Advanced ☒

6. Start VM.

7. Repeat steps 1-6 on all nodes.


Initial Configuration Wizard

1. Start the StarWind Virtual SAN Controller Virtual Machine.
2. Launch the VM console to view the VM boot process and obtain the IPv4 address of the Management network interface.


NOTE: If the VM does not acquire an IPv4 address from a DHCP server, use the Text-based User Interface (TUI) to set up the Management network manually.

Default credentials for TUI: user/rds123RDS


3. Using a web browser, open a new tab and enter the VM's IPv4 address to access the StarWind VSAN Web Interface. On the Your connection is not private screen, click Advanced and then select Continue to...

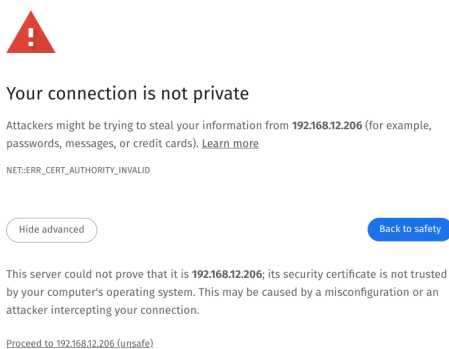


4. On the Welcome to StarWind Appliance screen, click Start to launch the Initial Configuration Wizard.

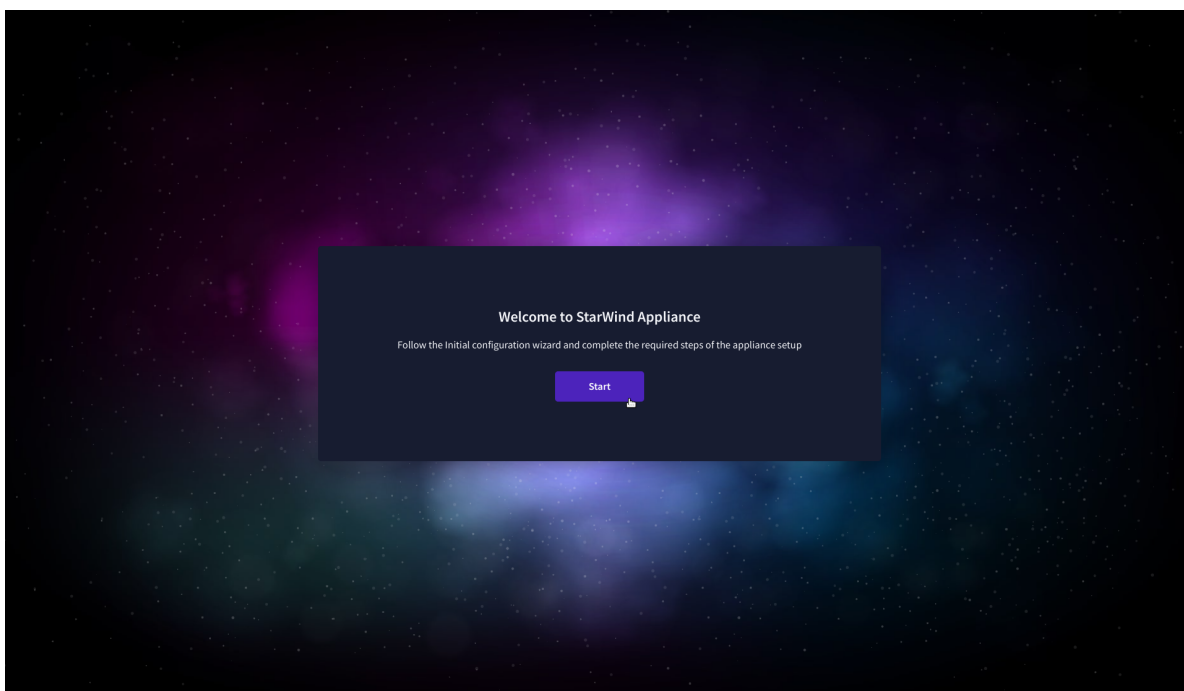

5. On the License step, upload the StarWind Virtual SAN license file.

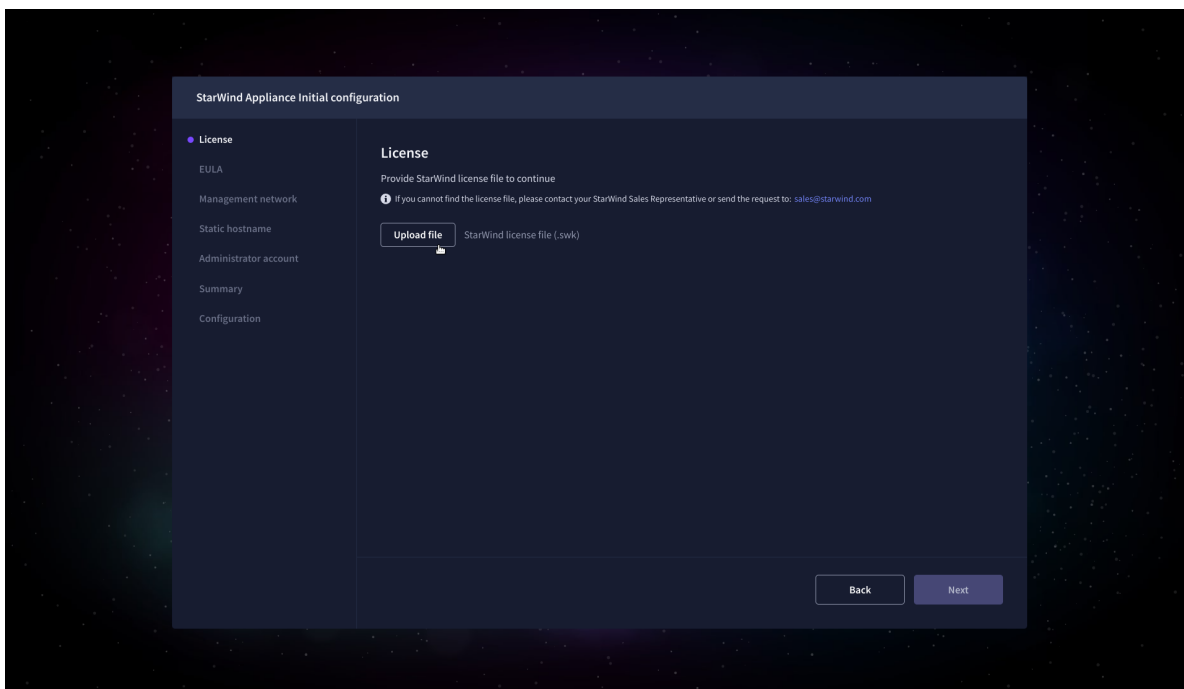


6. On the EULA step, read and accept the End User License Agreement to continue.

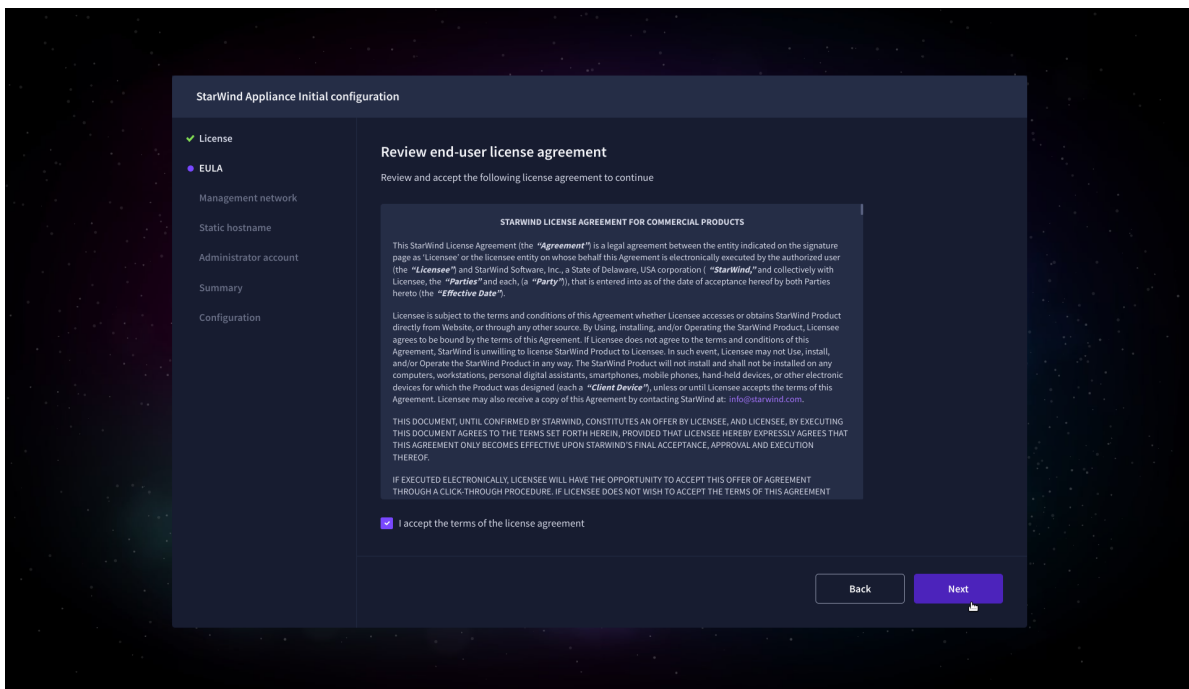


7. On the Management network step, review or edit the network settings and click Next.

IMPORTANT: The use of Static IP mode is highly recommended.

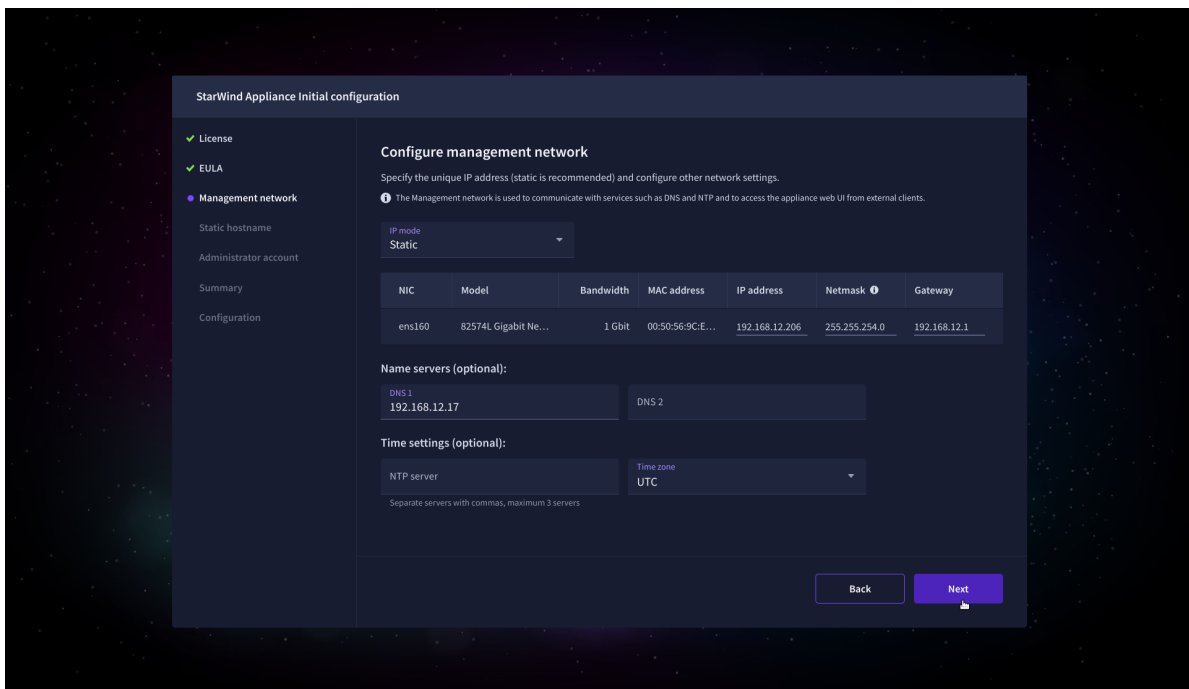


8. On the Static hostname, specify the hostname for the virtual machine and click Next.

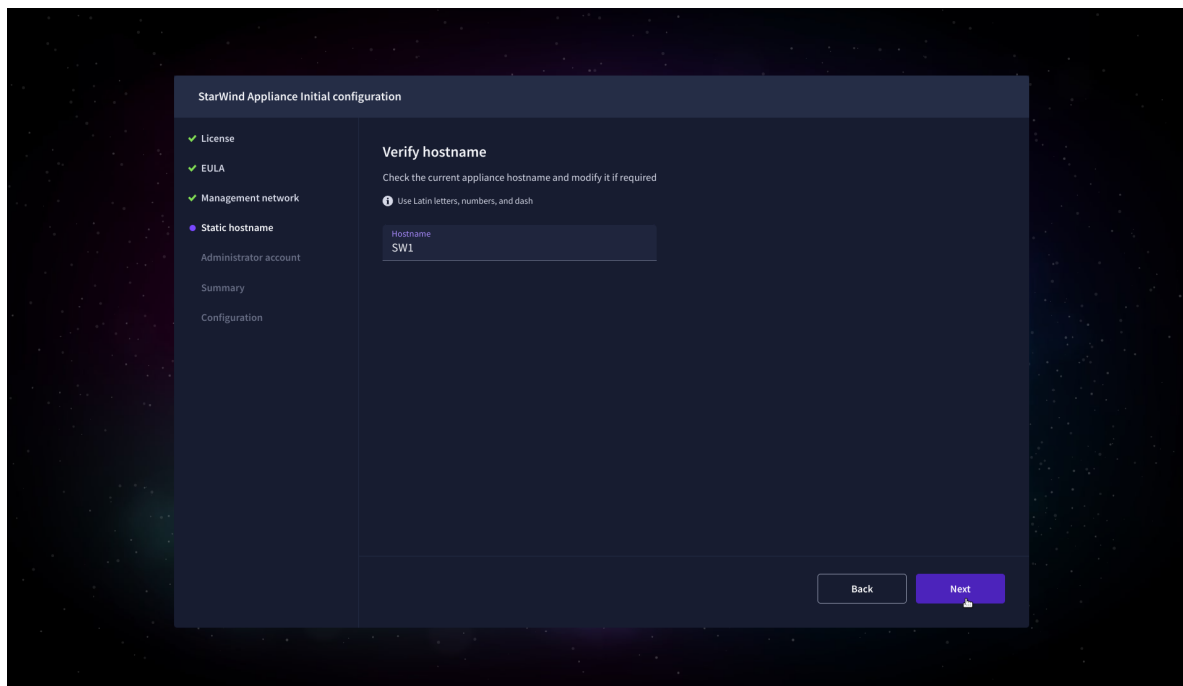


The screenshot shows the 'StarWind Appliance Initial configuration' window. On the left sidebar, the progress list includes: License (checked), EULA (checked), Management network (checked), Static hostname (selected), Administrator account, Summary, and Configuration. The main panel is titled 'Verify hostname' and contains the instruction 'Check the current appliance hostname and modify it if required'. Below this is a note: 'Use Latin letters, numbers, and dash'. A text input field labeled 'Hostname' contains the value 'SW1'. At the bottom right, there are 'Back' and 'Next' buttons.

9. On the Administrator account step, specify the credentials for the new StarWind Virtual SAN administrator account and click Next.

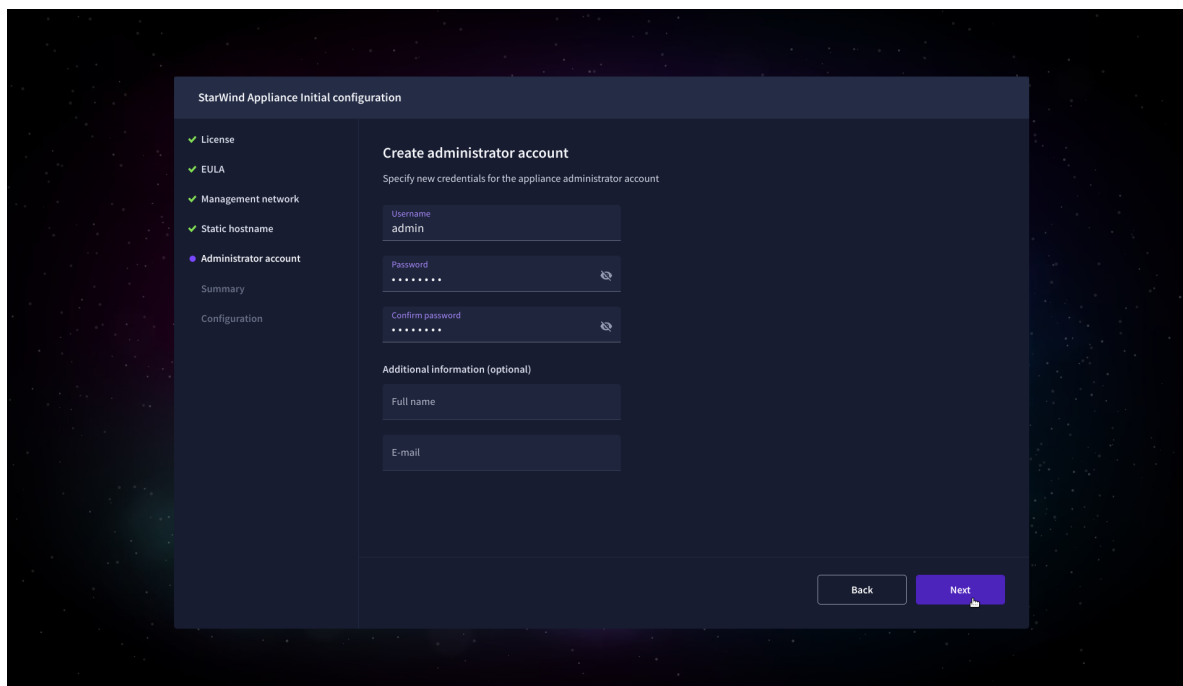


The screenshot shows the 'StarWind Appliance Initial configuration' window. On the left sidebar, the progress list includes: License (checked), EULA (checked), Management network (checked), Static hostname (checked), Administrator account (selected), Summary, and Configuration. The main panel is titled 'Create administrator account' and contains the instruction 'Specify new credentials for the appliance administrator account'. It features three input fields: 'Username' with the value 'admin', 'Password' (masked with dots), and 'Confirm password' (masked with dots). Below these are optional fields for 'Full name' and 'E-mail'. At the bottom right, there are 'Back' and 'Next' buttons.


10. Wait until the Initial Configuration Wizard configures StarWind Virtual SAN for you.

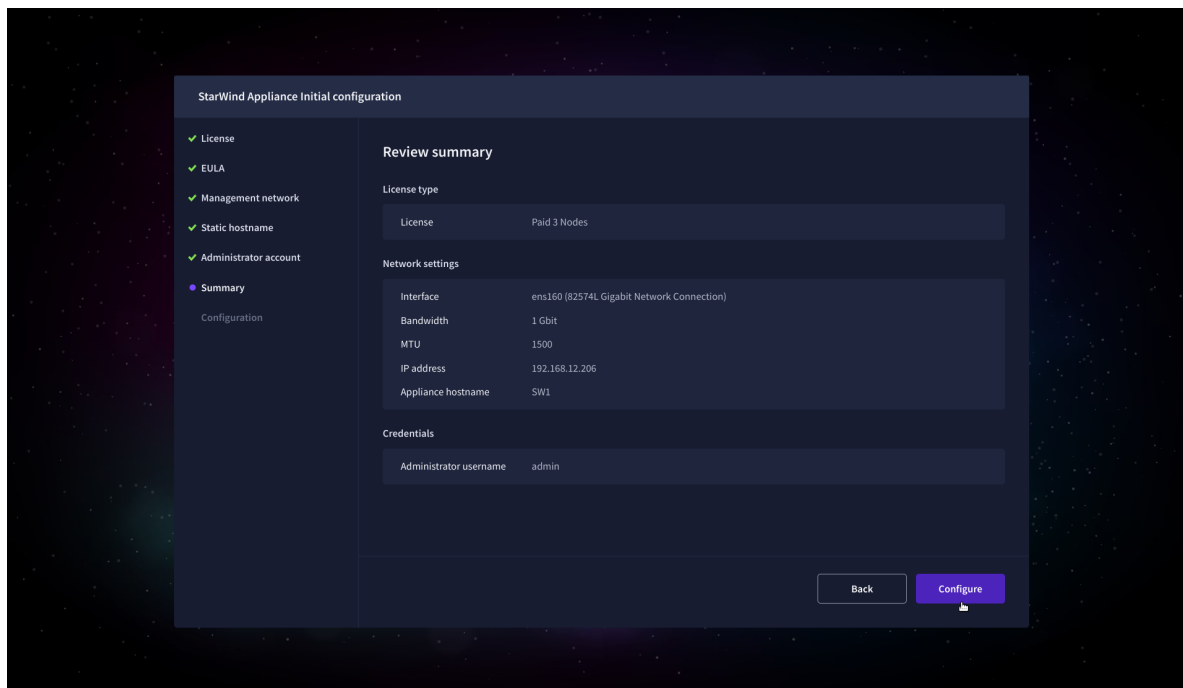

11. Please standby until the Initial Configuration Wizard configures StarWind VSAN for you.

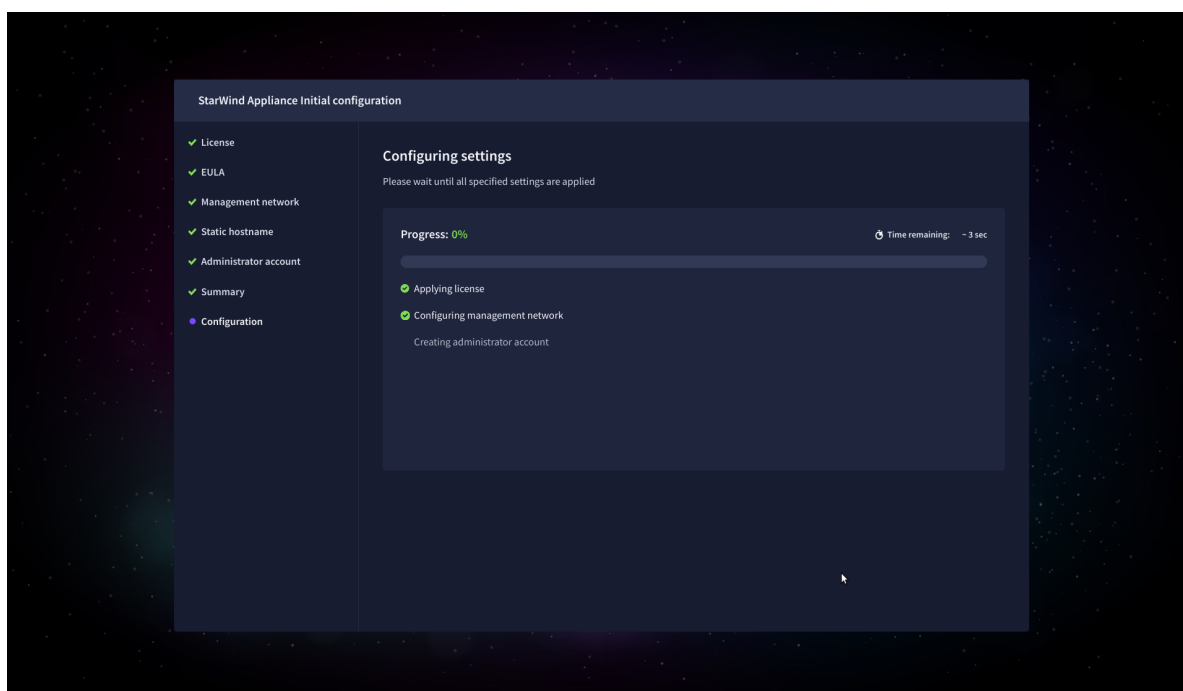

12. After the configuration process is completed, click Finish to install the StarWind vCenter Plugin immediately, or uncheck the checkbox to skip this step and proceed to the Login page.

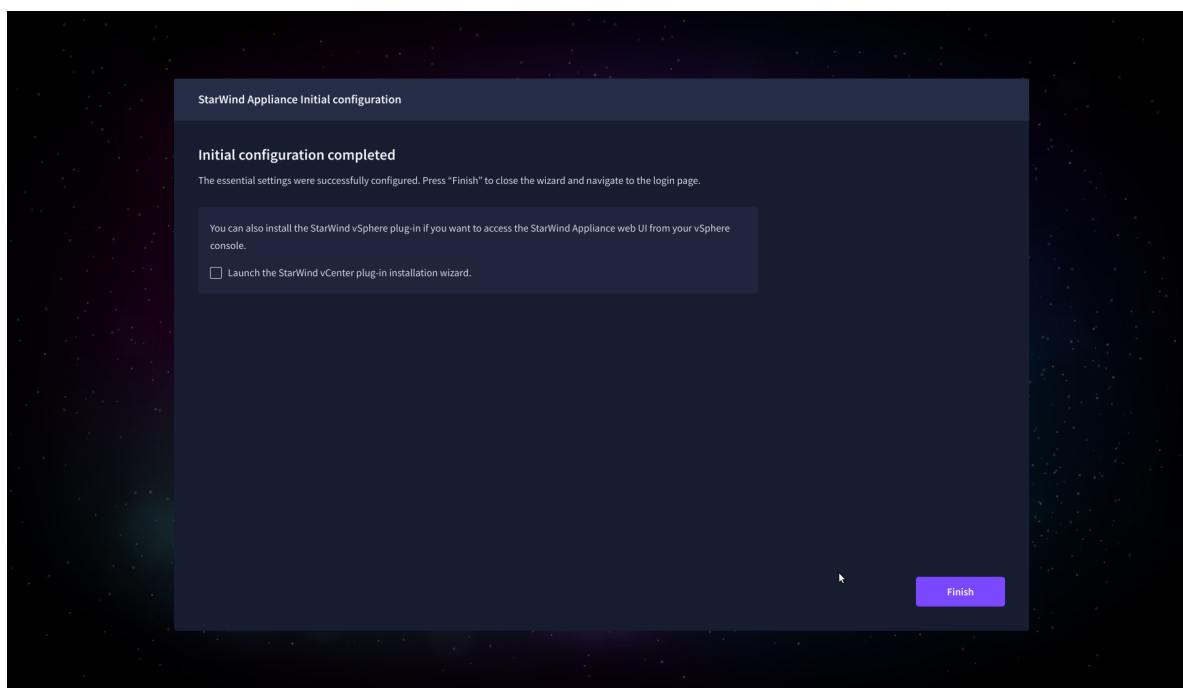


13. Repeat steps 1 through 12 on each Windows Server host.


Add Appliance

To create replicated, highly available storage, add partner appliances that use the same StarWind Virtual SAN license key.


1. Navigate to the Appliances page and click Add to open the Add appliance wizard.
2. On the Credentials step, enter the IP address and credentials for the partner StarWind Virtual SAN appliance, then click Next.

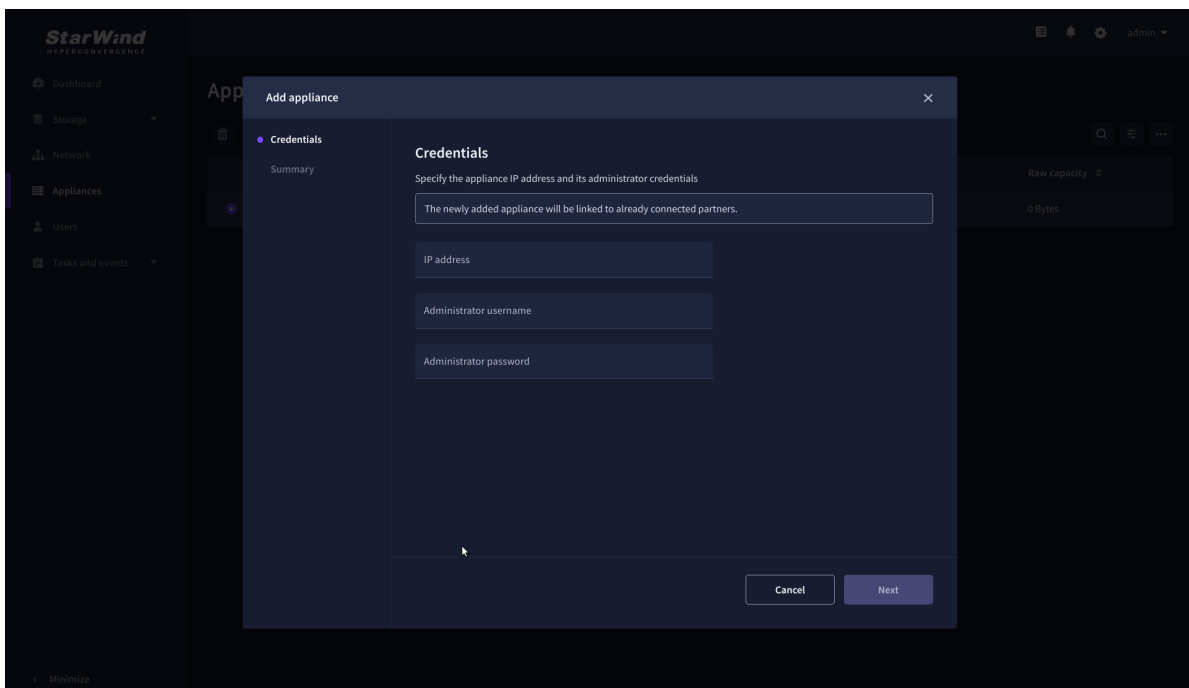

3. Provide credentials of partner appliance.

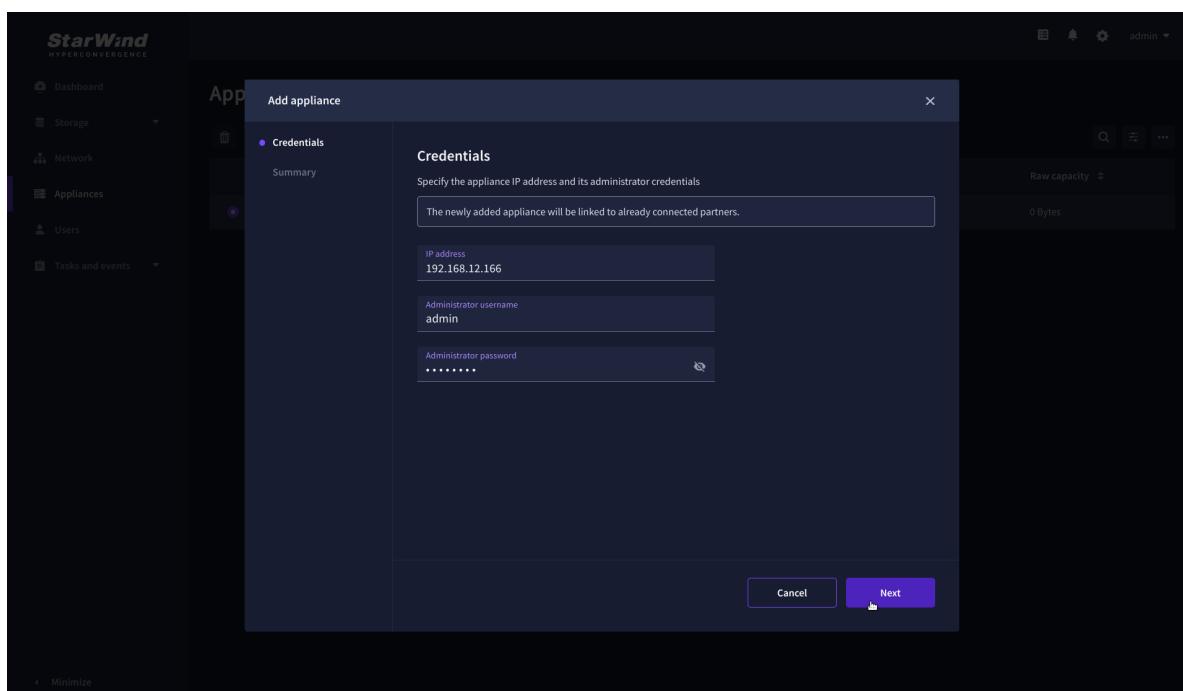


4. Wait for the connection to be established and the settings to be validated

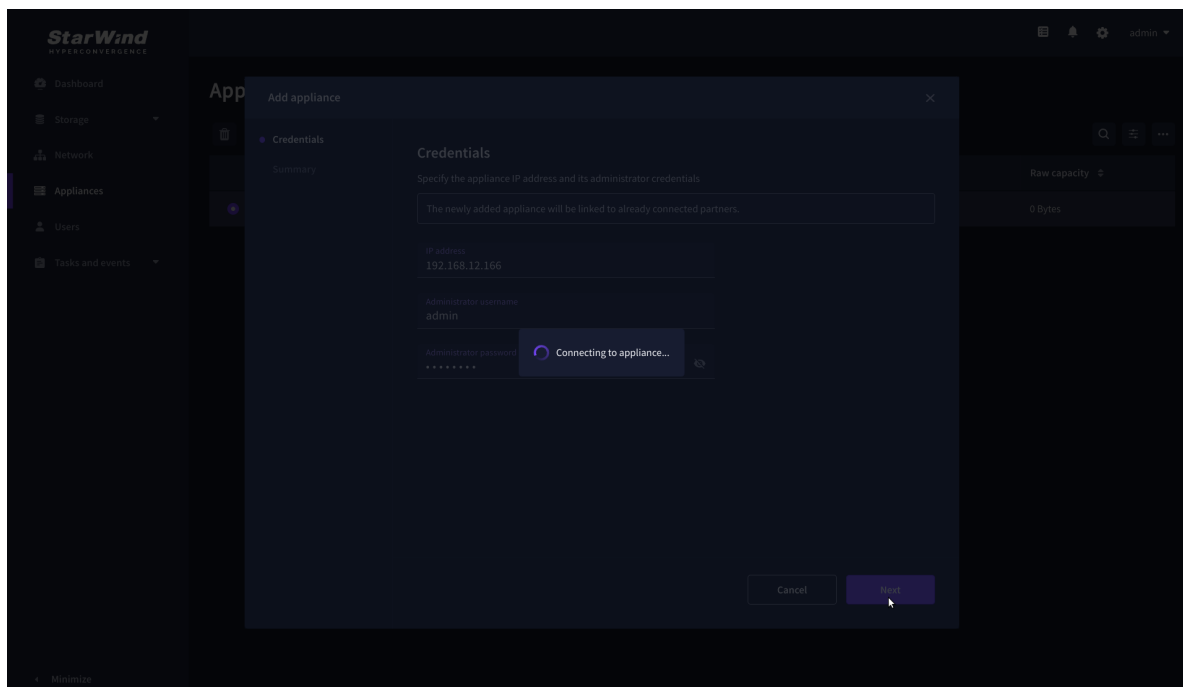


5. On the Summary step, review the properties of the partner appliance, then click Add

Appliance.

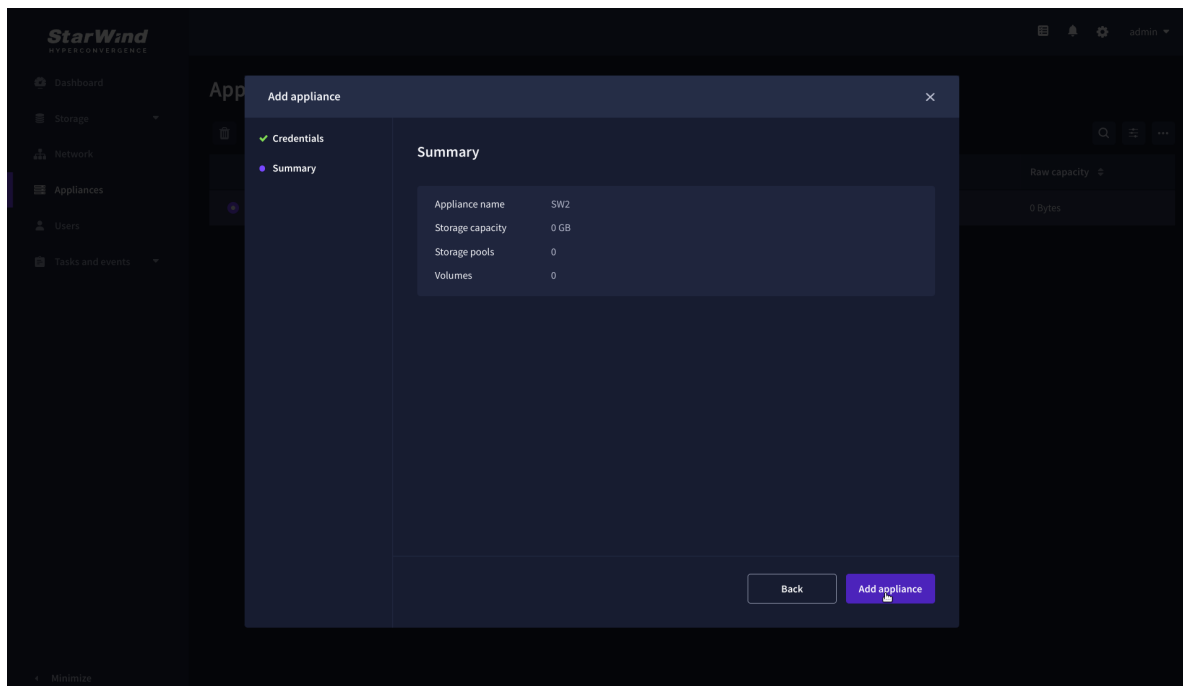


Configure Ha Networking

1. Navigate to the Network page and open Configure HA networking wizard.

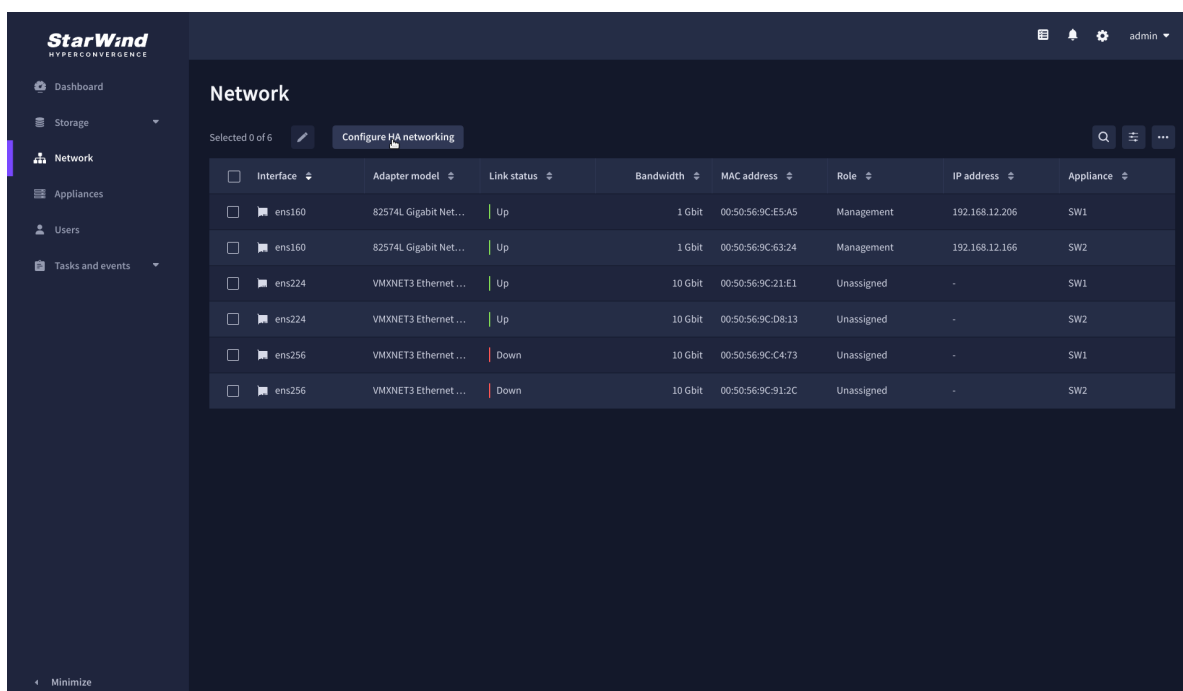

2. On the Appliances step, select either 2 partner appliances to configure two-way replication, or 3 appliances for three-way replication, then click Next.

NOTE: The number of appliances in the cluster is limited by your StarWind Virtual SAN license.

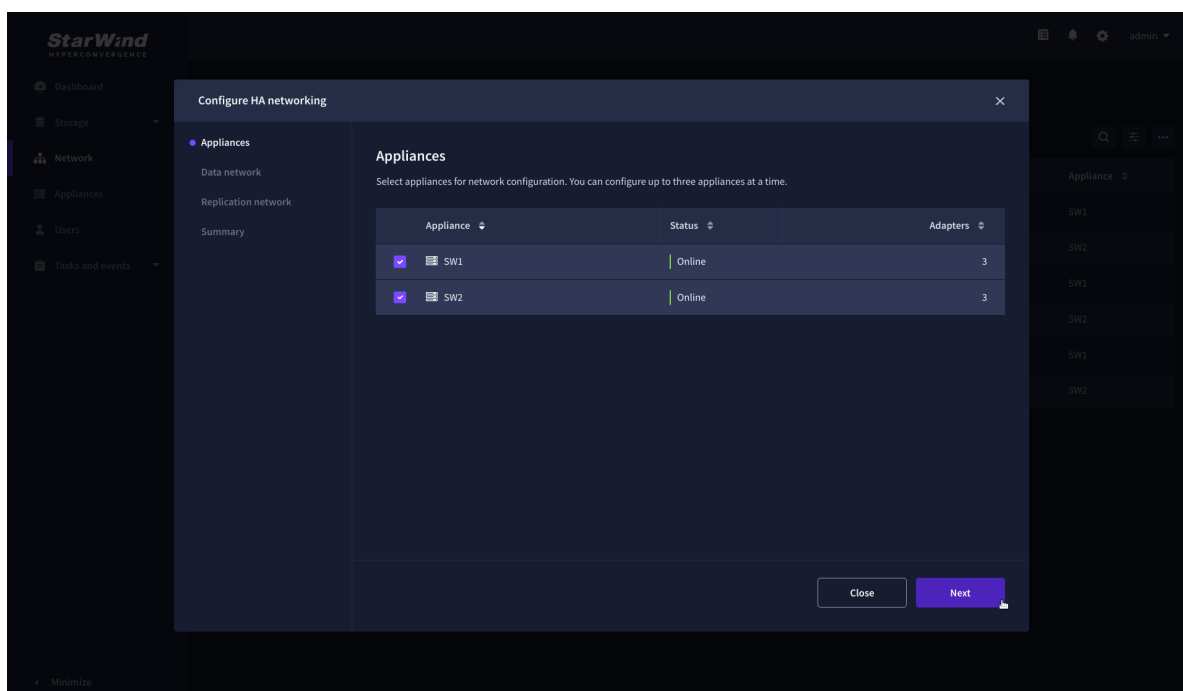


3. On the Data Network step, select the network interfaces designated to carry iSCSI or NVMe-oF storage traffic. Assign and configure at least one interface on each appliance (in our example: 172.16.10.10 and 172.16.10.20) with a static IP address in a unique network (subnet), specify the subnet mask and Cluster MTU size.

IMPORTANT: For a redundant, high-availability configuration, configure at least 2 network interfaces on each appliance. Ensure that the Data Network interfaces are interconnected between appliances through multiple direct links or via redundant switches.


4. Assign MTU value on all selected network adapters, e.g. 1500 or 9000 bytes. If you are using network switches with the selected Data Network adapters, ensure that they are configured with the same MTU size value. In case of MTU settings mismatch, stability and performance issues might occur on the whole setup.

NOTE: Setting MTU to 9000 bytes on some physical adapters (like Intel Ethernet Network Adapter X710, Broadcom network adapters, etc.) might cause stability and performance issues depending on the installed network driver. To avoid them, use 1500 bytes MTU size or install the stable version of the driver.

5. Once configured, click Next to validate network settings.

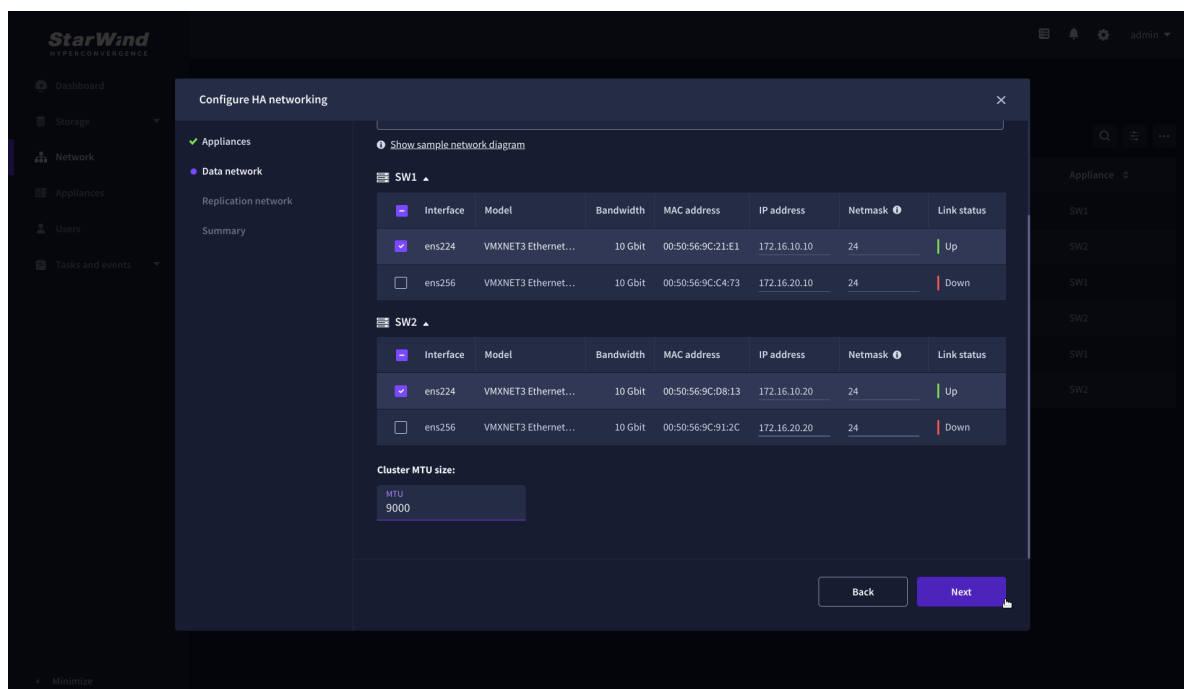

6. The warning might appear if a single data interface is configured. Click Yes, continue to proceed with the configuration.

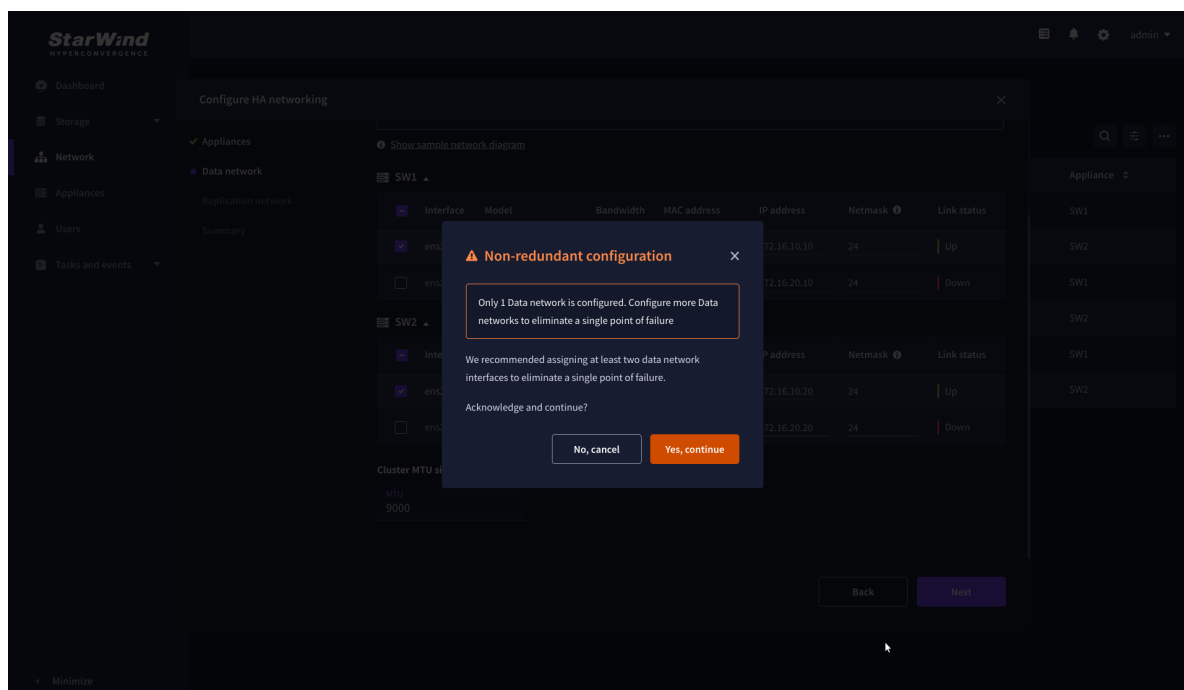


7. On the Replication Network step, select the network interfaces designated to carry the traffic for synchronous replication. Assign and configure at least one interface on each appliance with a static IP address in a unique network (subnet), specify the subnet mask and Cluster MTU size.

IMPORTANT: For a redundant, high-availability configuration, configure at least 2 network interfaces on each appliance. Ensure that the Replication Network interfaces are interconnected between appliances through multiple direct links or via redundant switches.


8. Assign MTU value on all selected network adapters, e.g. 1500 or 9000 bytes. If you are using network switches with the selected Replication Network adapters, ensure that they are configured with the same MTU size value. In case of MTU settings mismatch, stability and performance issues might occur on the whole setup.

NOTE: Setting MTU to 9000 bytes on some physical adapters (like Intel Ethernet Network Adapter X710, Broadcom network adapters, etc.) might cause stability and performance issues depending on the installed network driver. To avoid them, use 1500 bytes MTU size or install the stable version of the driver.


9. Once configured, click Next to validate network settings.

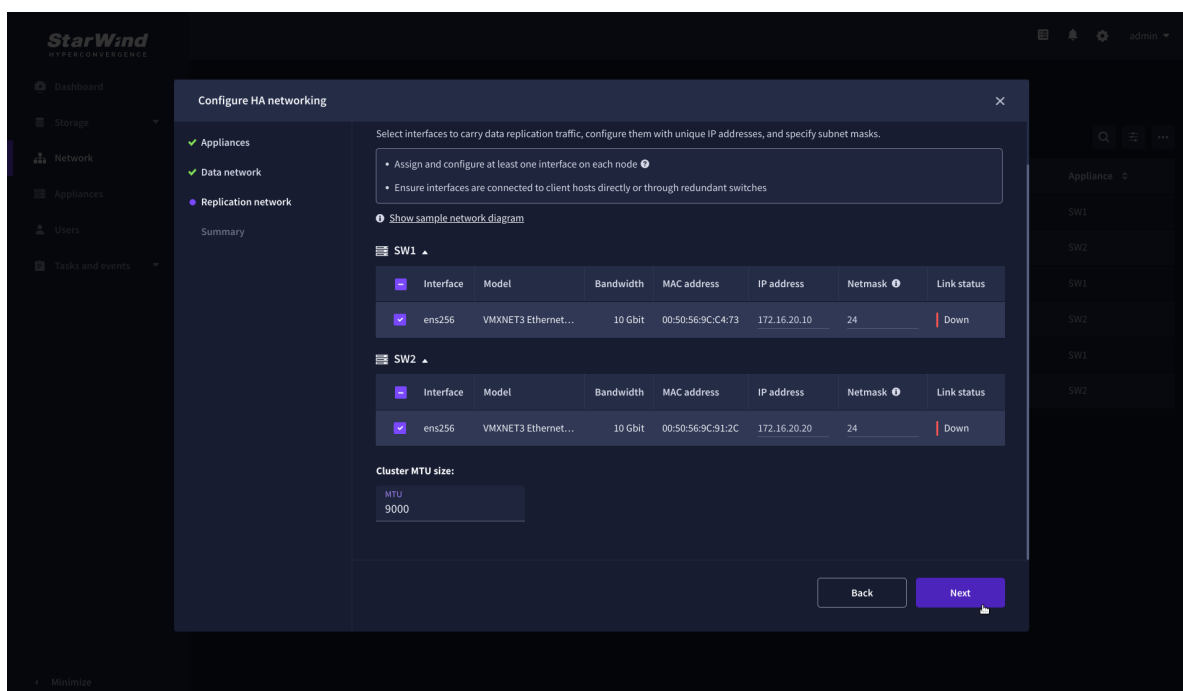


10. If only one Replication Network interface is configured on each partner appliance, a warning message will pop up. Click Yes, continue to acknowledge the warning and proceed.

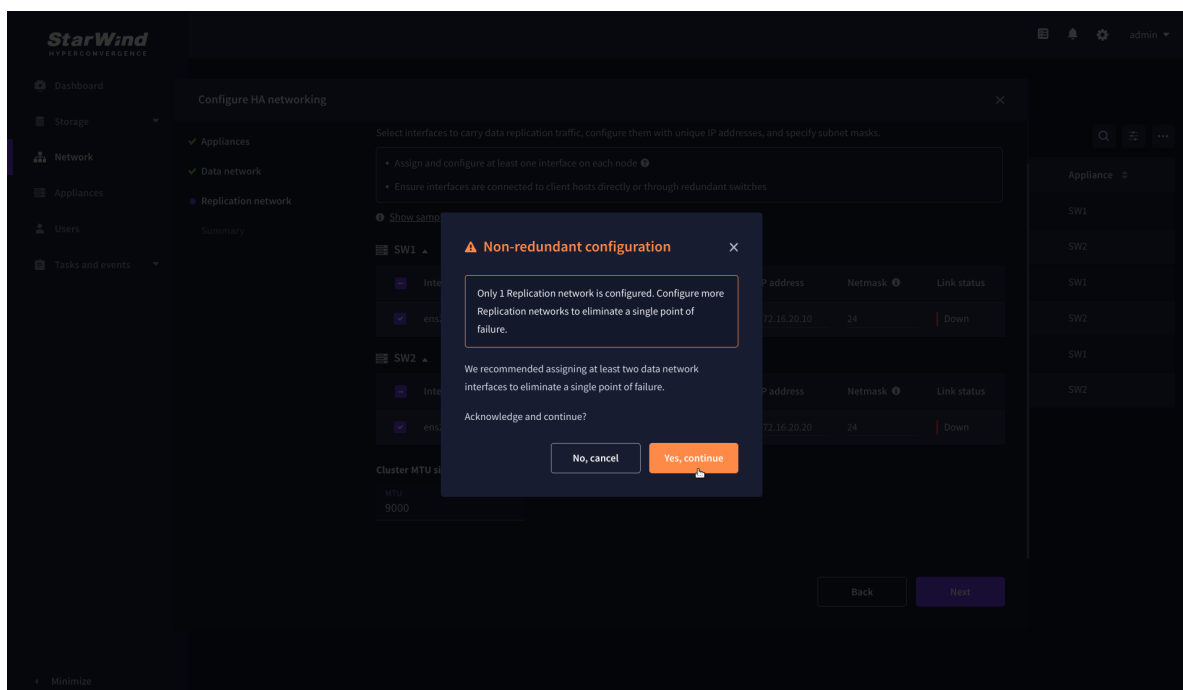

11. Wait for the configuration completion.

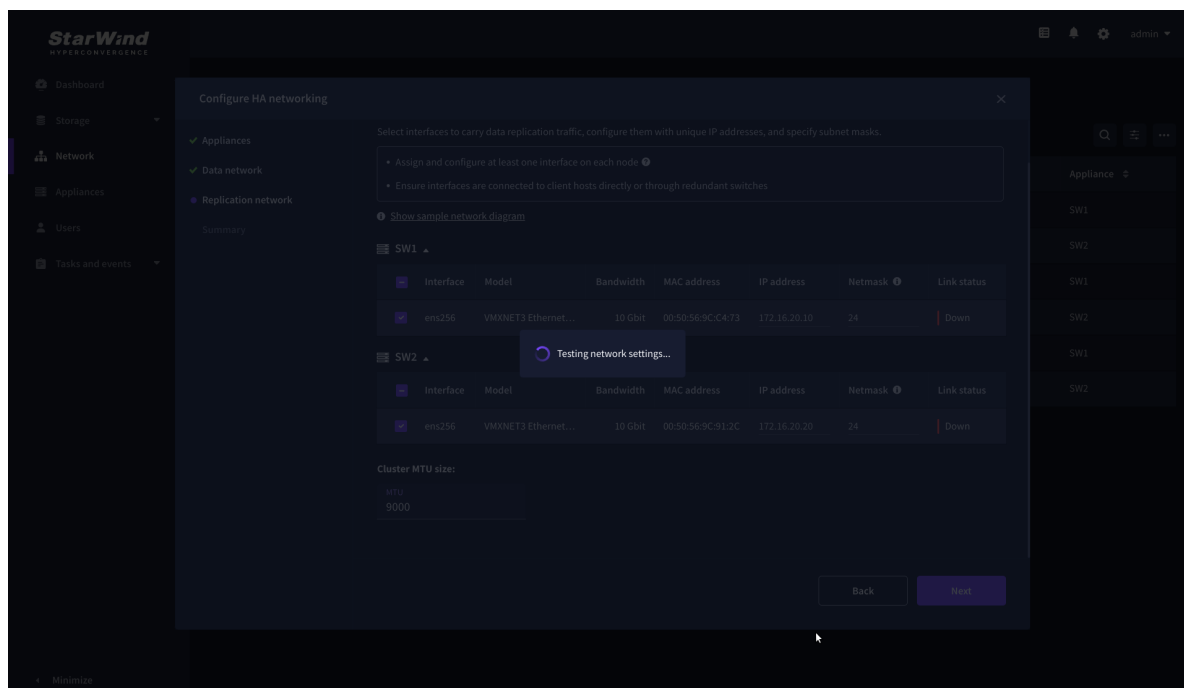

12. On the Summary step, review the specified network settings and click Configure to apply the changes.

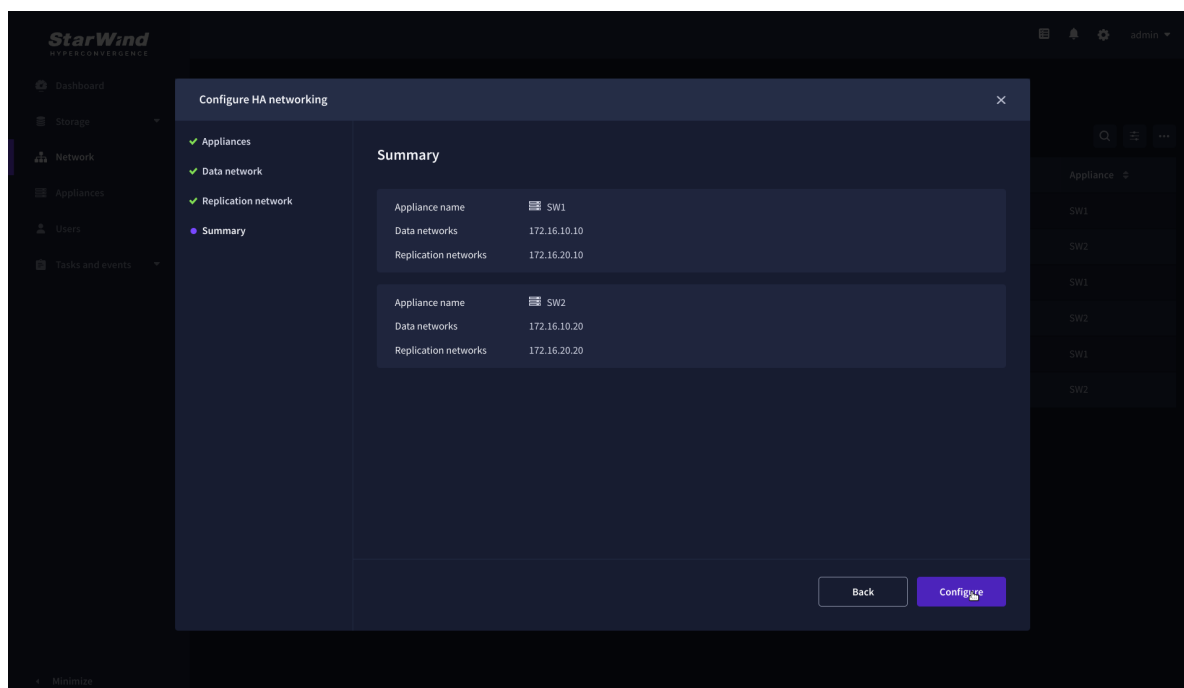

Add Physical Disks


Attach physical storage to StarWind Virtual SAN Controller VM:

- Ensure that all physical drives are connected through an HBA or RAID controller.
- To get the optimal storage performance, add HBA, RAID controllers, or NVMe SSD drives to StarWind CVM via a passthrough device.

For detailed instructions, refer to [Microsoft's documentation on DDA](#). Also, find the storage provisioning guidelines in the [KB article](#).

Create Storage Pool


1. Navigate to the Storage pools page and click the + button to open the Create storage pool wizard .

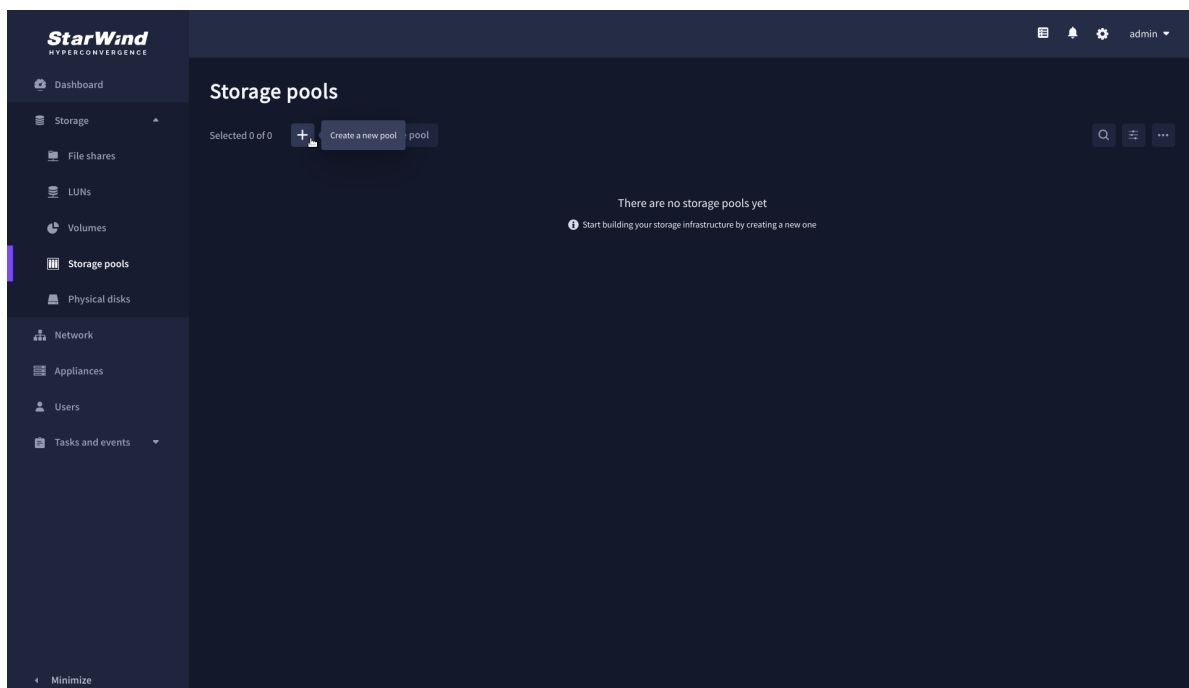

2. On the Appliance step, select partner appliances on which to create new storage pools, then click Next.


NOTE: Select 2 appliances for configuring storage pools if you are deploying a two-node cluster with two-way replication, or select 3 appliances for configuring a three-node

cluster with a three-way mirror.

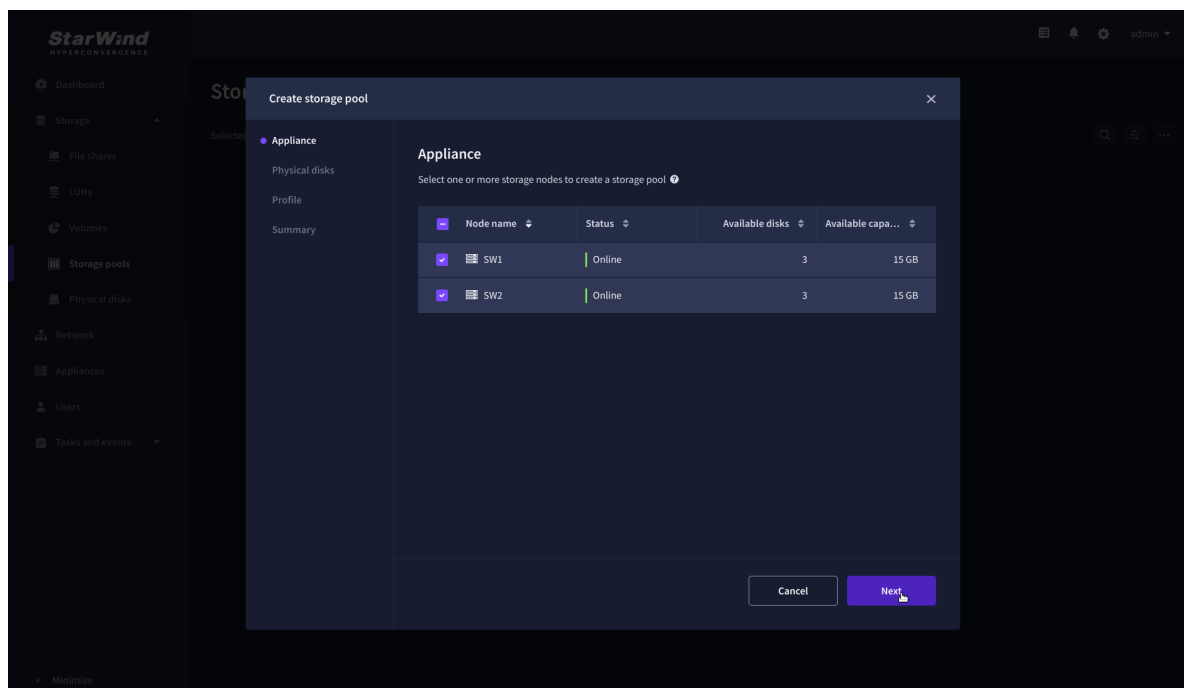


3. On the Physical disks step, select physical disks to be pooled on each node, then click Next.

IMPORTANT: Select an identical type and number of disks on each appliance to create storage pools with a uniform configuration.

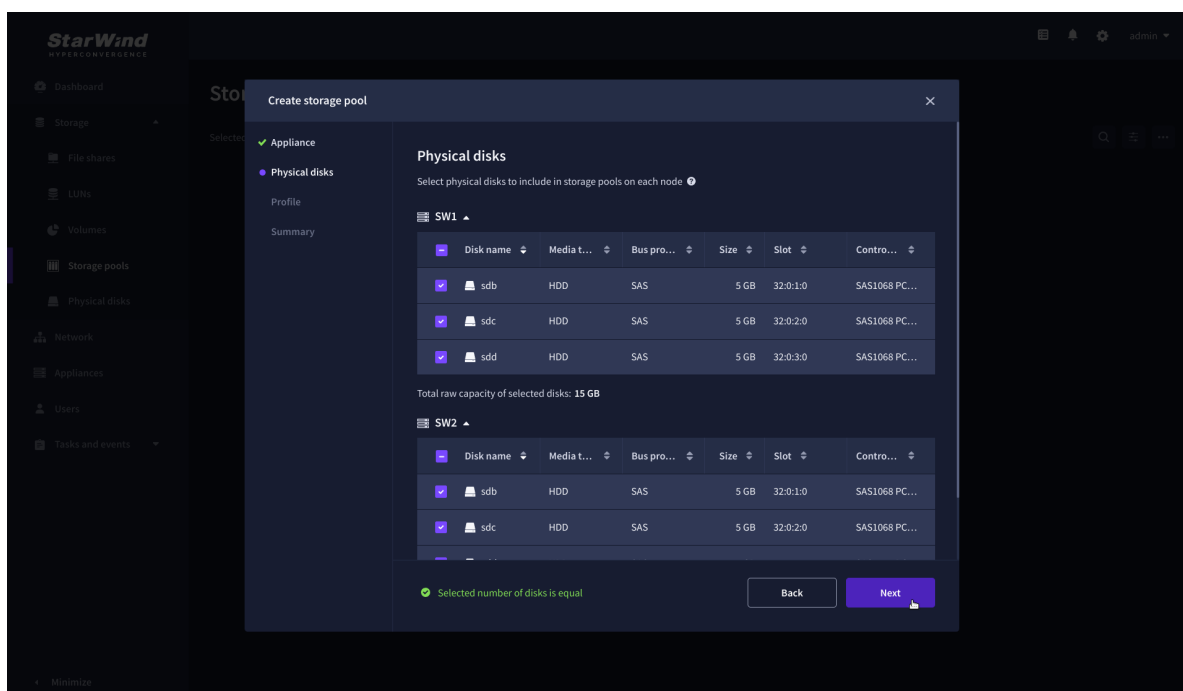

4. On the Profile step, select one of the preconfigured storage profiles, or choose Manual to configure the storage pool manually based on your redundancy, capacity, and performance requirements, then click Next.

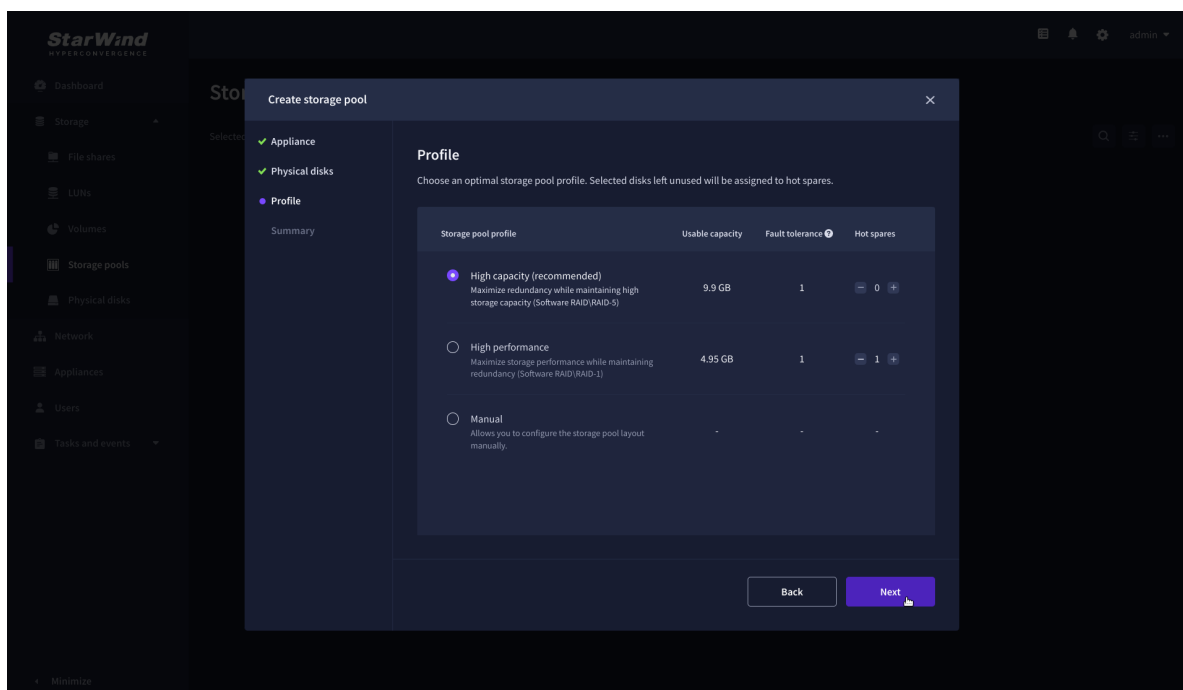


NOTE: Hardware RAID, Linux Software RAID, and ZFS storage pools are supported. To

simplify the configuration of storage pools, preconfigured storage profiles are provided. These profiles recommend a pool type and layout based on the attached storage:

- High capacity – creates Linux Software RAID-5 to maximize storage capacity while maintaining redundancy.
- High performance – creates Linux Software RAID-10 to maximize storage performance while maintaining redundancy.
- Hardware RAID – configures a hardware RAID virtual disk as a storage pool. This option is available only if a hardware RAID controller is passed through to the StarWind Virtual SAN.
- Better redundancy – creates ZFS Striped RAID-Z2 (RAID 60) to maximize redundancy while maintaining high storage capacity.
- Manual – allows users to configure any storage pool type and layout with the attached storage.

5. On the Summary step, review the storage pool settings and click Create to configure new storage pools on the selected appliances.

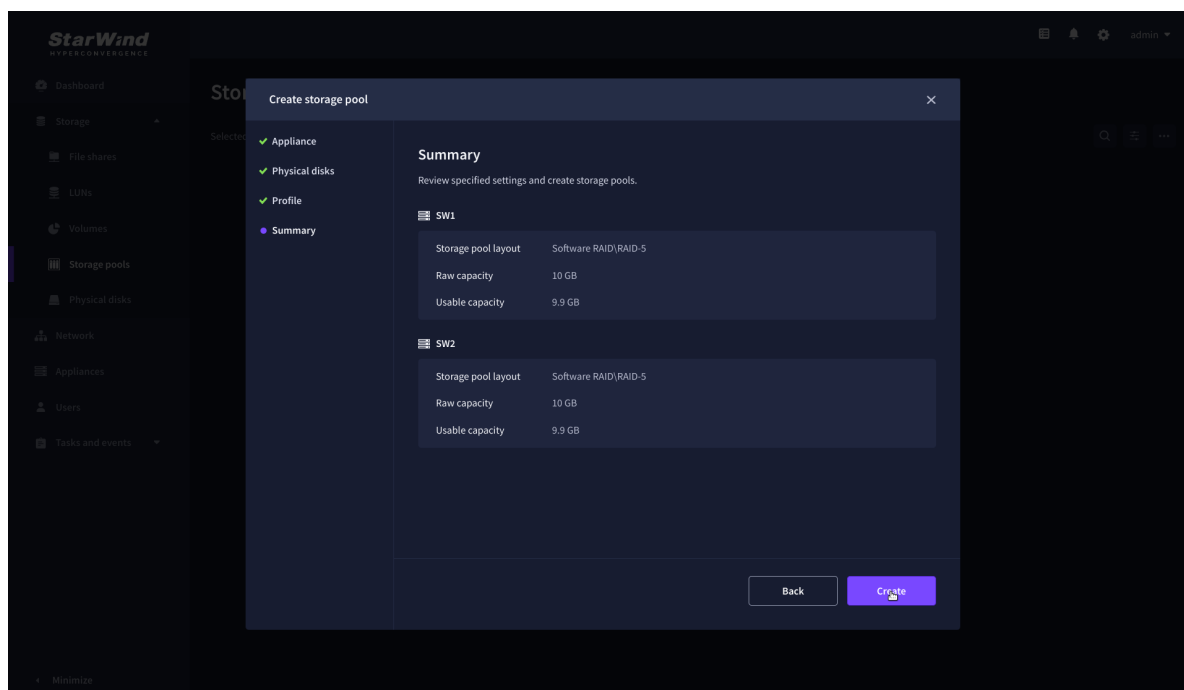

NOTE: The storage pool configuration may take some time, depending on the type of pooled storage and the total storage capacity. Once the pools are created, a notification will appear in the upper right corner of the Web UI.


IMPORTANT: In some cases, additional tweaks are required to optimize the storage performance of the disks added to the Controller Virtual Machine. Please follow the steps in this KB to change the scheduler type depending on the disks type:

<https://knowledgebase.starwindsoftware.com/guidance/starwind-vsan-for-vsphere-changi>

[ng-linux-i-o-scheduler-to-optimize-storage-performance/](#)


Create Volume

1. Navigate to the Volumes page and click the + button to open the Create volume wizard.

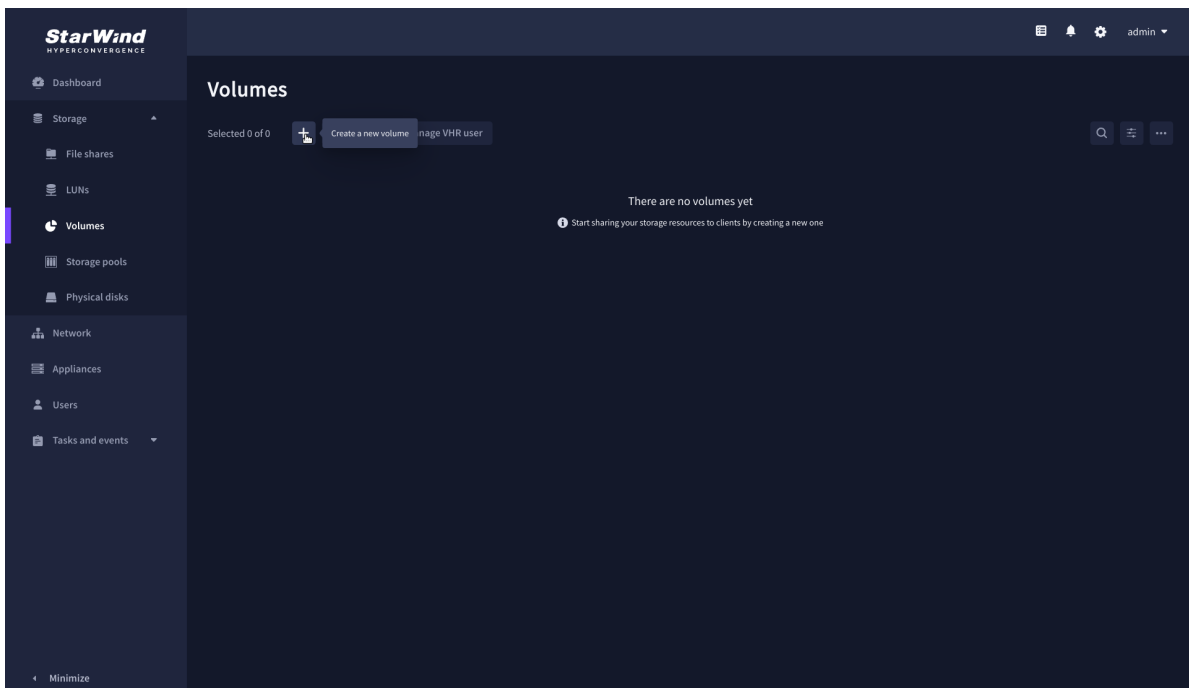


2. On the Storage pool step, select partner appliances on which to create new volumes, then click Next.


NOTE: Select 2 appliances for configuring volumes if you are deploying a two-node cluster with two-way replication, or select 3 appliances for configuring a three-node cluster with a three-way mirror.

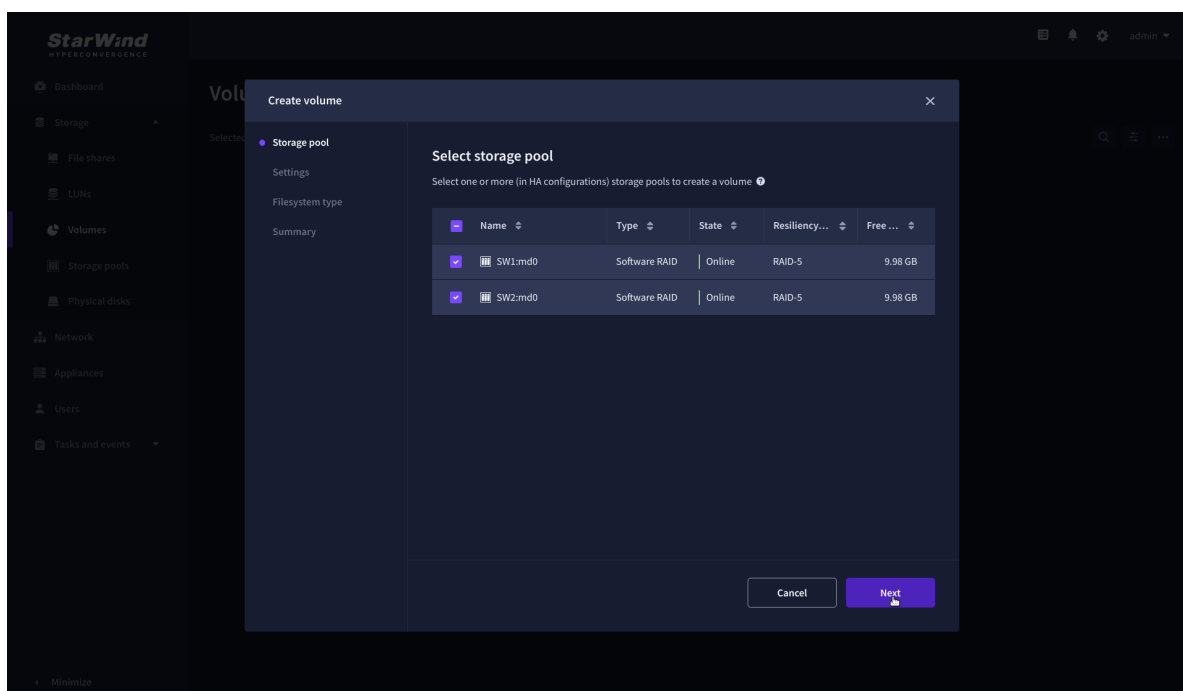


3. On the Settings step, specify the volume name and size, then click Next.

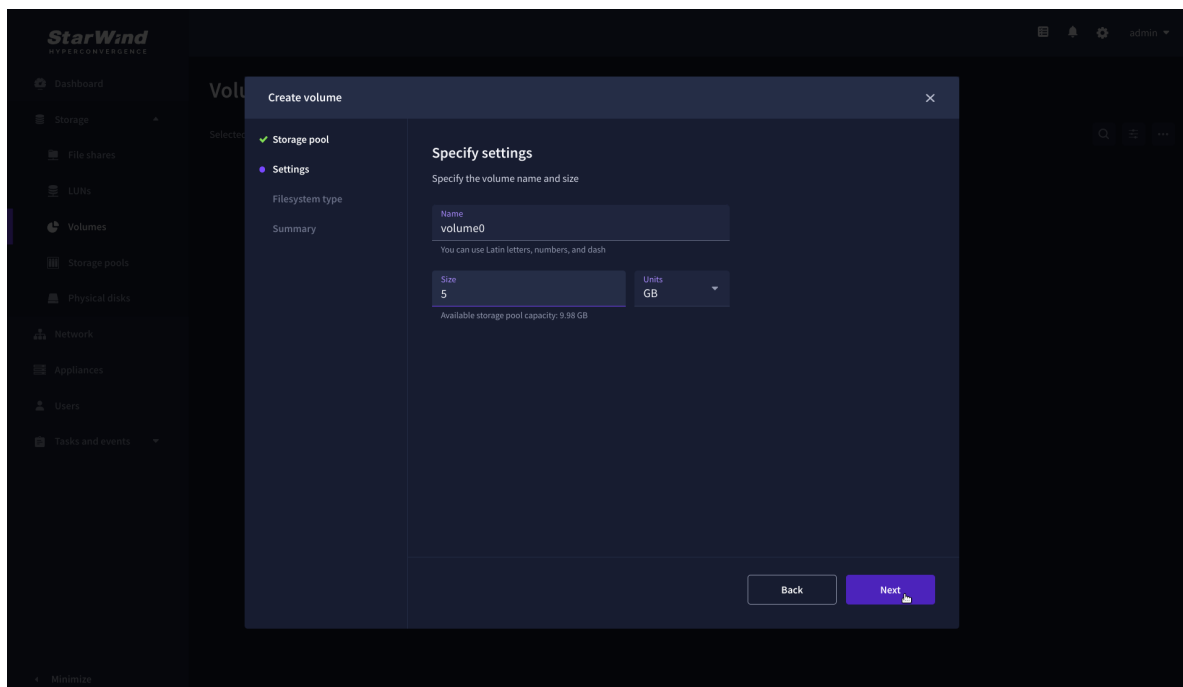

4. On the Filesystem type step, select Standard, then click Next.

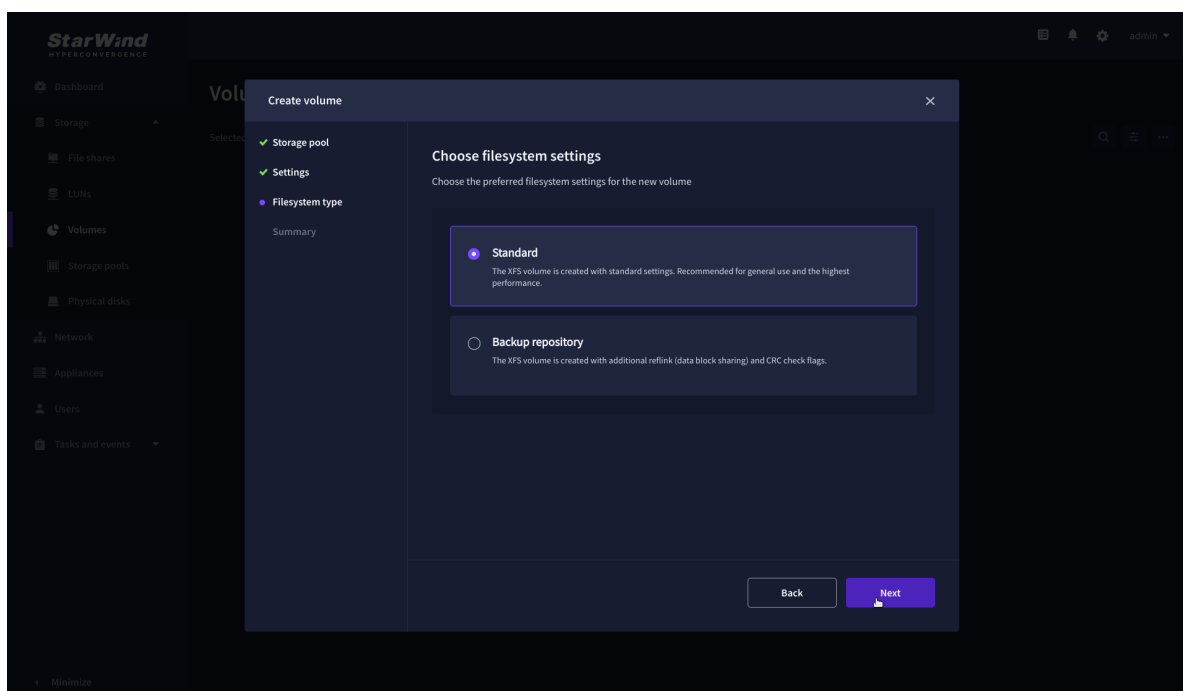

5. Review Summary and click the Create button to create the pool.

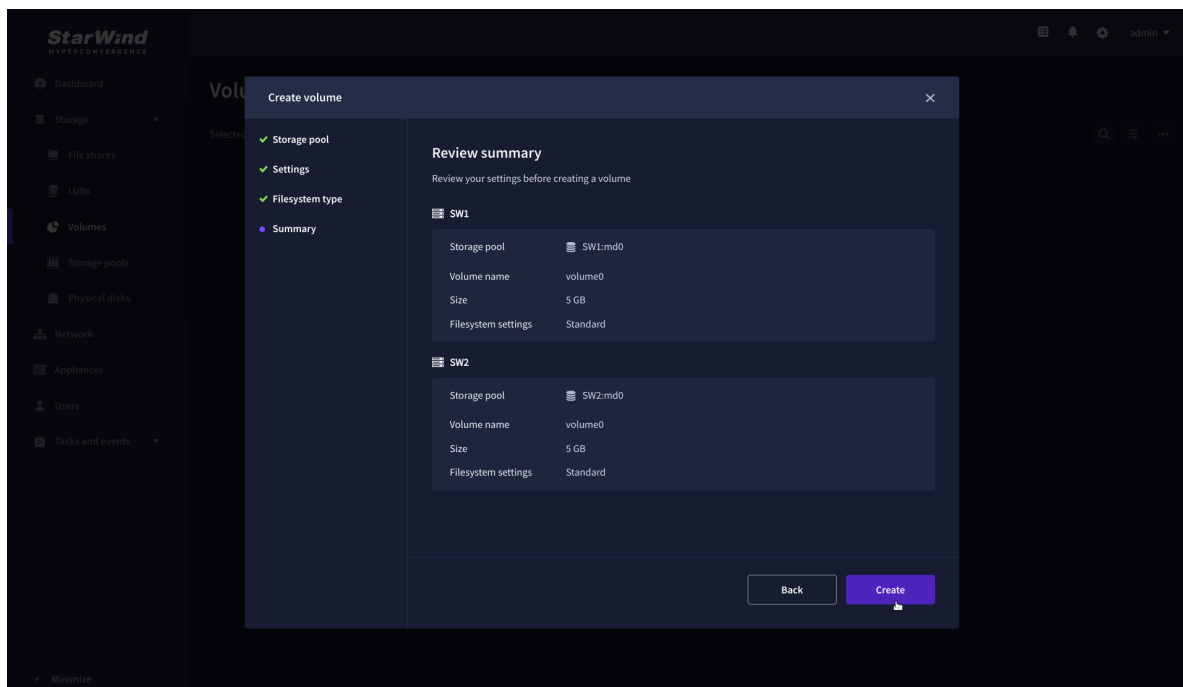


Create Ha Lun Using Webui


This section describes how to create LUN in Web UI. This option is available for the setups with Commercial, Trial, and NFR licenses applied.

For setups with a Free license applied, the PowerShell script should be used to create the LUN – please follow the steps described in the section: Create StarWind HA LUNs using PowerShell

1. Navigate to the LUNs page and click the + button to open the Create LUN wizard.

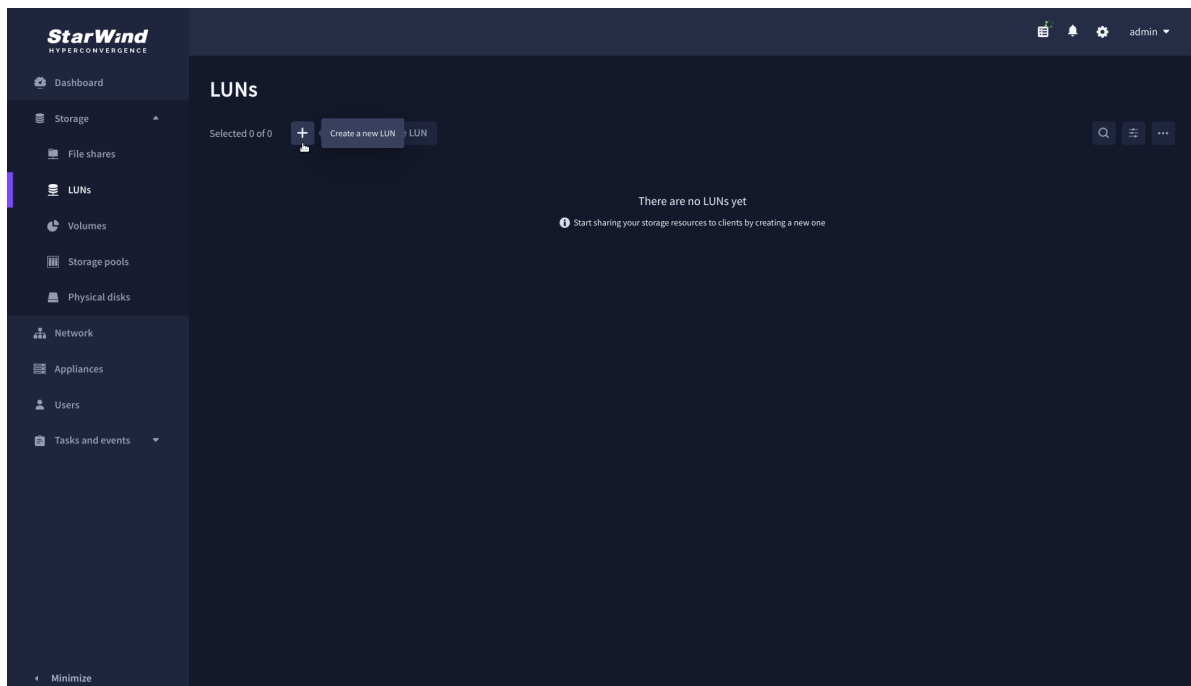


2. On the Protocols step, select the preferred storage protocol and click Next.

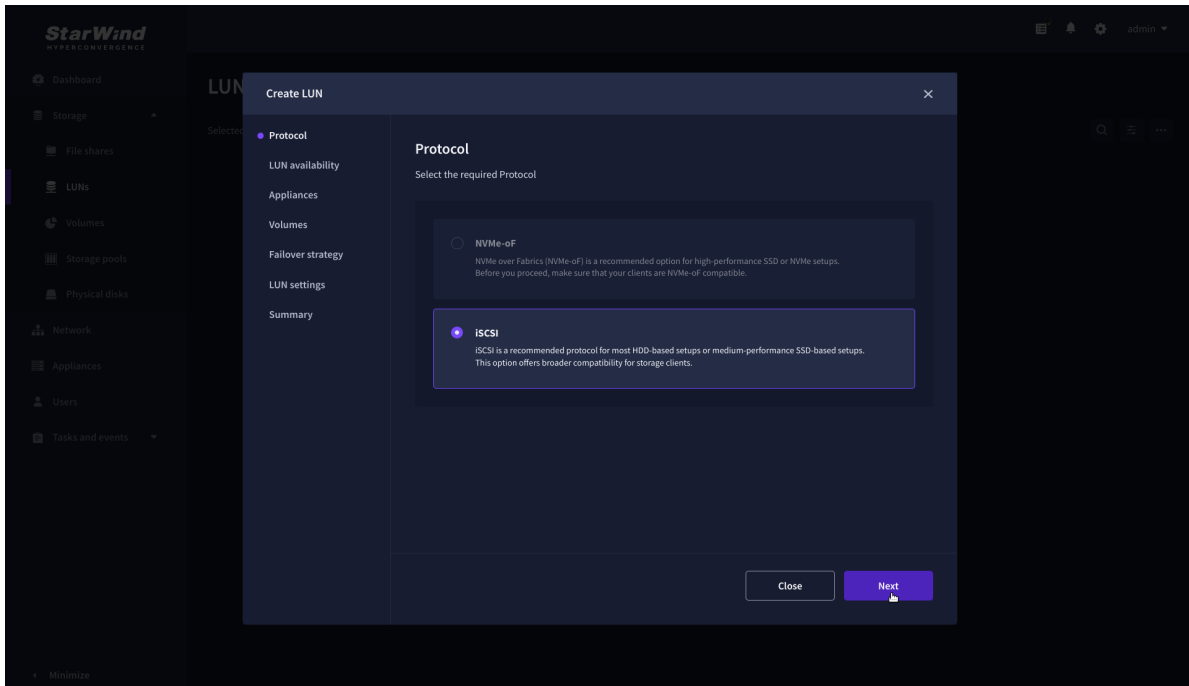

3. On the LUN availability step, select the High availability and click Next.


NOTE: The availability options for a LUN can be Standalone (without replication) or High Availability (with 2-way or 3-way replication), and are determined by the StarWind Virtual SAN license.

Below are the steps for creating a high-availability iSCSI LUN.

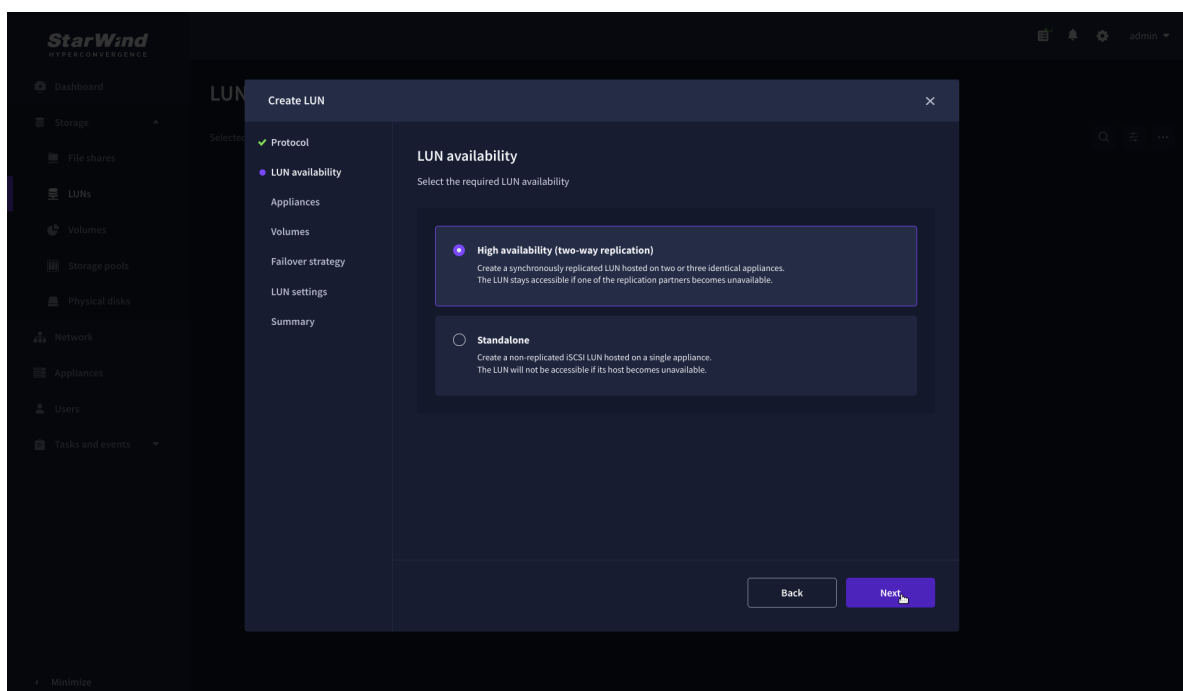


4. On the Appliances step, select partner appliances that will host new LUNs and click Next.

IMPORTANT: Selected partner appliances must have identical hardware configurations, including CPU, RAM, storage, and networking.

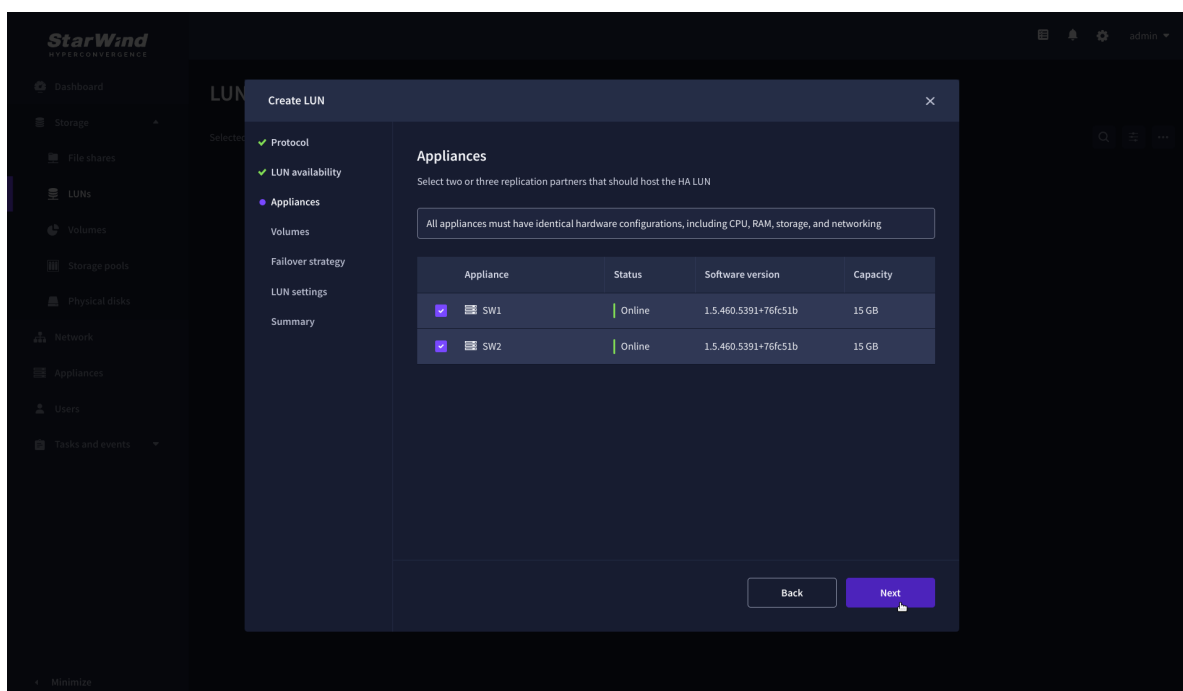


5. On the Volumes step, select the volumes for storing data on the partner appliances and click Next.

IMPORTANT: For optimal performance, the selected volumes must have identical underlying storage configurations.

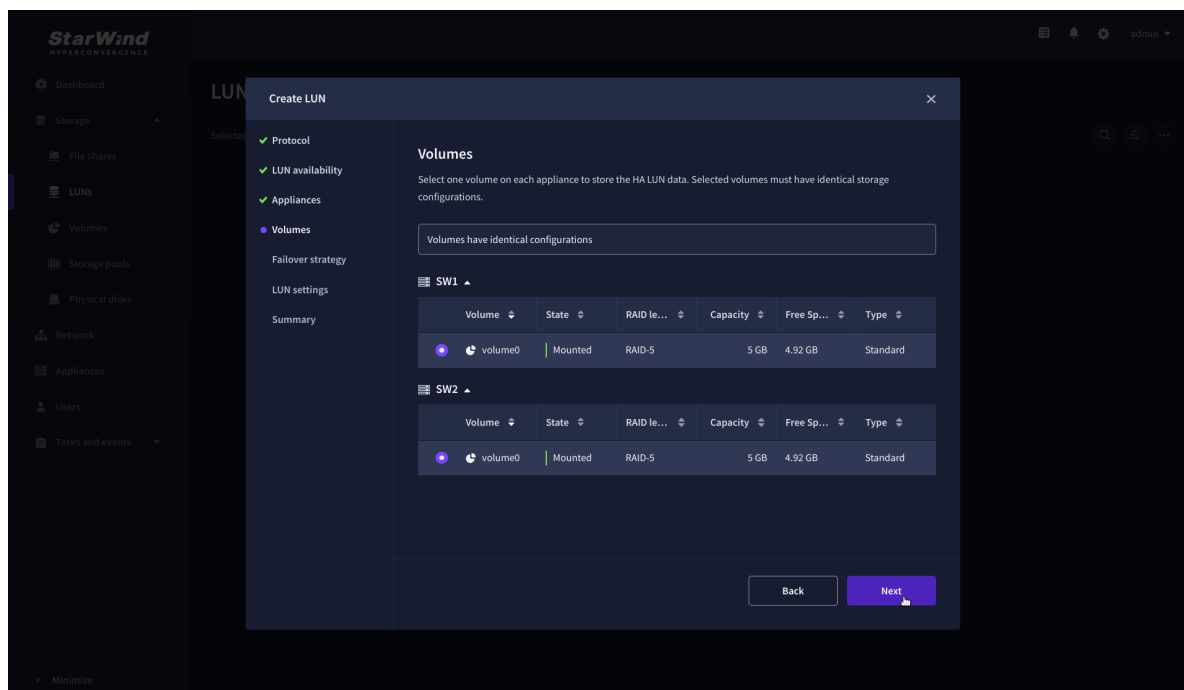


6. On the Failover strategy step, select the preferred failover strategy and click Next.

NOTE: The failover strategies for a LUN can be Heartbeat or Node Majority. In case of 2-nodes setup and None Majority failover strategy, Node witness (requires an additional third witness node), or File share witness (requires an external file share) should be configured. These options are determined by StarWind Virtual SAN license and setup configuration. Below are the steps for configuring the Heartbeat failover strategy in a two-node cluster.

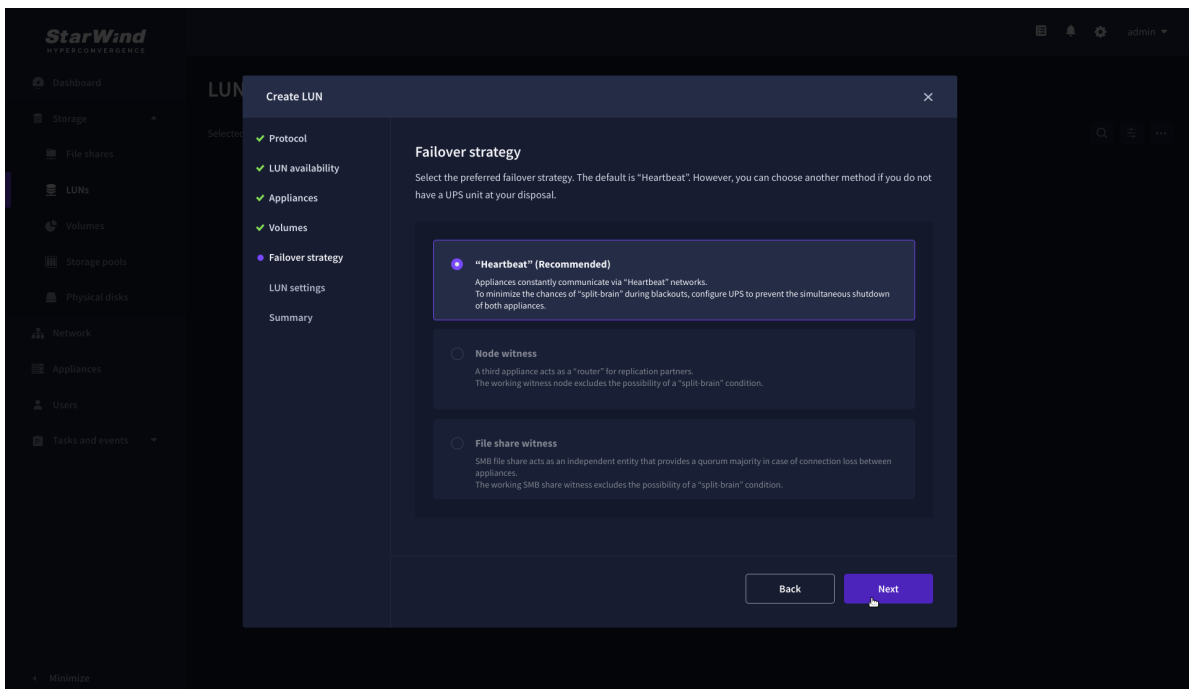


7. On the LUN settings step, specify the LUN name, size, block size, then click Next.

NOTE: For high-availability configurations, ensure that MPIO checkbox is selected.

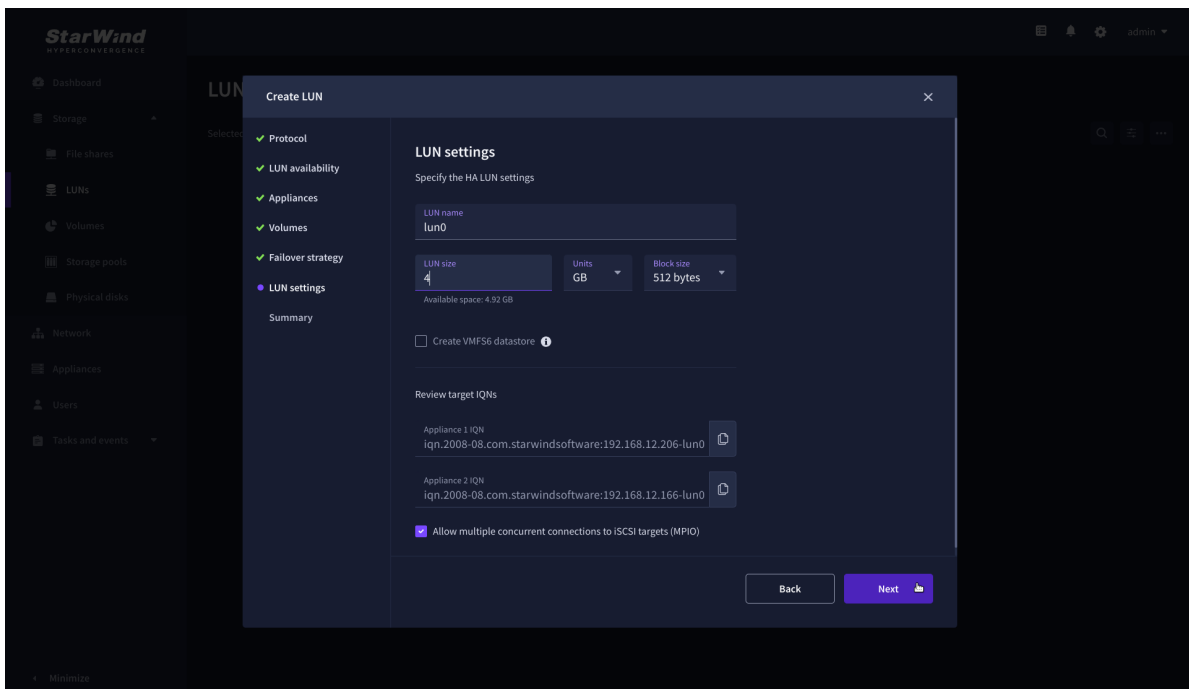

- On the Summary step, review the LUN settings and click Create to configure new LUNs on the selected volumes.

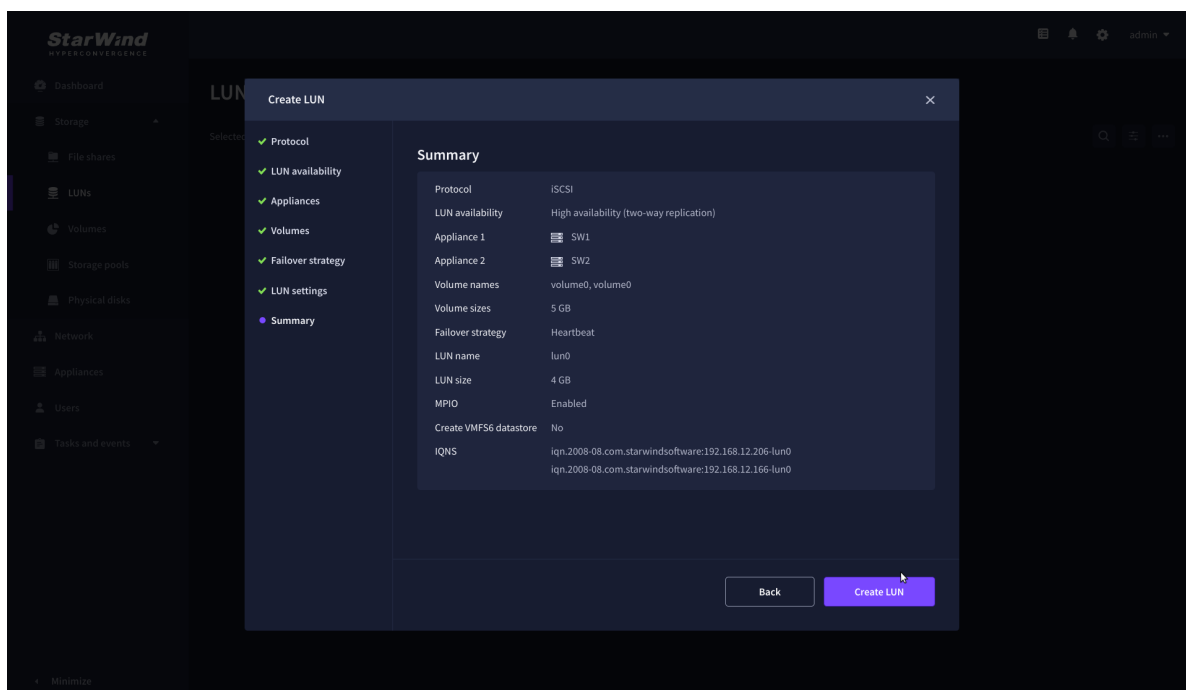


Connecting Starwind Ha Storage To Proxmox Hosts

- Connect to Proxmox host via SSH and install multipathing tools.

```
pve# apt-get install multipath-tools
```

- Edit nano /etc/iscsi/initiatorname.iscsi setting the initiator name.

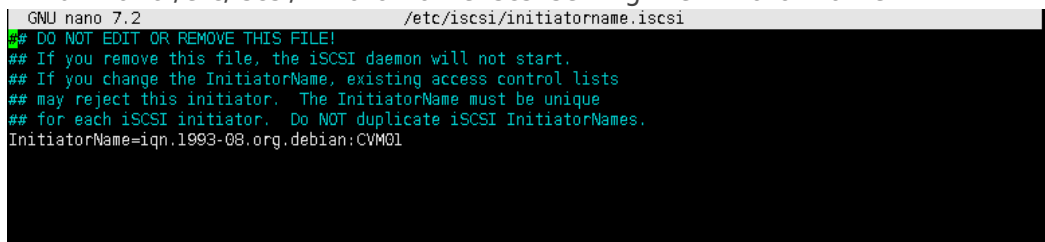

- Edit /etc/iscsi/iscsid.conf setting the following parameters:

```
node.startup = automatic
node.session.timeo.replacement_timeout = 15
node.session.scan = auto
```

Note. node.startup = manual is the default parameter, it should be changed to node.startup = automatic.

4. Create file /etc/multipath.conf using the following command:

```
touch /etc/multipath.conf
```

5. Edit /etc/multipath.conf adding the following content:

```
devices{
    device{
        vendor "STARWIND"
        product "STARWIND*"
        path_grouping_policy multibus
        path_checker "tur"
        failback immediate
        path_selector "round-robin 0"
        rr_min_io 3
        rr_weight uniform
        hardware_handler "1 alua"
    }
}

defaults {
    polling_interval          2
    path_selector             "round-robin 0"
    path_grouping_policy      multibus
    uid_attribute             ID_SERIAL
    rr_min_io                 100
    failback                  immediate
    user_friendly_names       yes
}
```

6. Run iSCSI discovery on both nodes:

```
pve# iscsiadm -m discovery -t st -p 10.20.1.10
pve# iscsiadm -m discovery -t st -p 10.20.1.20
```

7. Connect iSCSI LUNs:

```
pve# iscsiadm -m node -T iqn.2008-08.com.starwindsoftware:sw1-
```

```
ds1 -p 10.20.1.10 -l  
pve# iscsiadm -m node -T iqn.2008-08.com.starwindsoftware:sw2-  
ds1 -p 10.20.1.20 -l
```

8. Get WWID of StarWind HA device:

```
/lib/udev/scsi_id -g -u -d /dev/sda
```

9. The wwid must be added to the file '/etc/multipath/wwids'. To do this, run the following command with the appropriate wwid:

```
multipath -a %WWID%
```

10. Restart multipath service.

On Proxmox 8:

```
systemctl restart multipath-tools.service
```

On Proxmox 9:

```
systemctl restart multipathd
```

11. Check if multipathing is running correctly:

```
pve# multipath -ll
```

12. Repeat steps 1-11 on every Proxmox host.

Adding Starwind Storage To Proxmox

There are several ways to add StarWind storage to Proxmox host: as a regular LVM storage (thick or thin) or via StarWind x Proxmox VE SAN Integration Services that support thin provisioning and VM snapshots:

<https://www.starwindsoftware.com/proxmox-san-integration-services>

Please follow the instructions below according to the specific storage requirements that are preferable for the environment.

Adding Storage Via Starwind X Proxmox Ve San Integration Services

NOTE: Find out more information about [StarWind x Proxmox VE SAN Integration Services](https://www.starwindsoftware.com/resource-library/starwind-x-proxmox-ve-san-integration-services) and thin provisioning, VM snapshots support:

<https://www.starwindsoftware.com/resource-library/starwind-x-proxmox-san-integration-configuration-guide/>

Installing StarWind Integration on Proxmox VE 8

1. Add StarWind Proxmox repo to the Proxmox VE 8 host.

```
echo "deb [arch=amd64
trusted=yes] http://repo.starwind.com/proxmox/ master main" >
/etc/apt/sources.list.d/starwind-proxmox.list

curl --
silent https://repo.starwind.com/keys/repo\_public.key | gpg --
dearmor --yes --output /etc/apt/trusted.gpg.d/starwind-
proxmox.gpg
```

2. Run update.

```
apt update
```

3. Install StarWind Integration deb package.

```
apt install starwind-proxmox-plugin
```

4. Repeat steps 1-3 on all nodes in the cluster.

Installing StarWind Integration on Proxmox VE 9

1. Download the StarWind Integration installation script by executing command on each Proxmox VE 9 host:

```
curl -fsSL -o
install-starwind-proxmox-plugin-pve9.sh http://repo.starwind.com/san-and-nas/scripts/install-starwind-proxmox-plugin-pve9.sh
```

2. Execute the script:

```
bash install-starwind-proxmox-plugin-pve9.sh
```

The script will add the StarWind Proxmox repository to Proxmox VE 9 sources, validate the currently installed version, and install or update the latest StarWind Integration for Proxmox VE 9.

3. Repeat steps 1-2 on all nodes in the cluster.

Configure the attached storage

1. Create an LVM Physical Volume on the shared SAN LUN.

```
pvccreate /dev/mapper/mpatha
vgcreate swvg /dev/mapper/mpatha
vgs
```

Where:

/dev/mapper/mpatha – shared multipath device swvg – LVM Volume Group name

2. Add a new storage to the PVE cluster using the starlvm plugin.

```
pvesm add starlvm swlun -vgname swvg -content images,rootdir -
shared 1
```

Parameters explanation:

Parameter Description

starlvm	Storage plugin type
swlun	Storage name in Proxmox
-vgname	LVM Volume Group used by the plugin
-content	Allowed content types (VM disks and containers)
-shared	Enables shared storage across the cluster

3. Repeat steps 1-2 on all nodes in the cluster.

Adding Regular Lvm Storage On Proxmox

1. Create LVM PV on multipathing device:


```
pvccreate /dev/mapper/mpatha
```

where mpatha – alias for StarWind LUN

2. Create VG on LVM PV:

```
pve# vgcreate vg-vms /dev/mapper/mpath0
```

3. Login to Proxmox via Web and go to Datacenter -> Storage. Add new LVM storage based on VG created on top of StarWind HA Device. Enable Shared checkbox. Click Add.

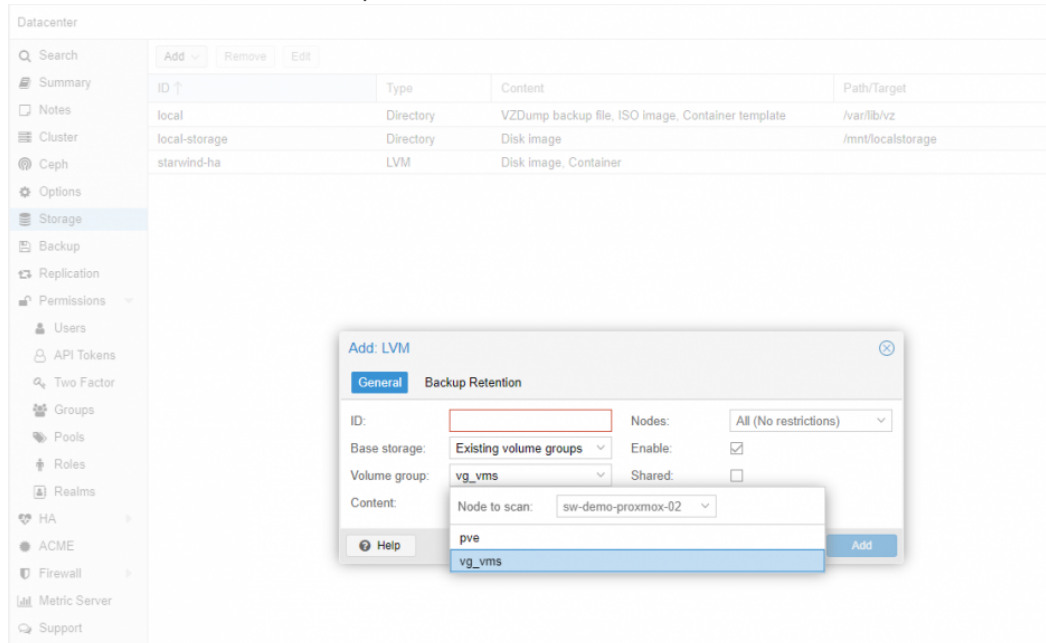

4. Login via SSH to all hosts and run the following command:
pvscan -cache

Configure Storage Rescan

A storage rescan is required so each Proxmox host can detect new or updated iSCSI volumes presented by the StarWind Controller Virtual Machines. It is also necessary to perform a storage rescan after a resynchronization to ensure that all hosts correctly

recognize paths to the shared volumes and maintain proper storage connectivity. Please find below the steps on how to create a dedicated system user on each Proxmox host that can only execute a single command. Alternatively, the root user can be used for the storage rescan.

1. Connect to the Proxmox host via SSH.

2. Install the sudo package if it's not already available to configure fine-grained privilege delegation for specific users.

```
apt-get install sudo
```

3. Create a new user named 'rescan'

```
useradd -m -s /bin/bash rescan
```

4. Set a password for the user

```
passwd rescan
```


5. Grant command-specific sudo permission. Open the sudoers file safely using 'visudo'.

```
visudo
```

Scroll to the bottom of the file and add the following line below the root entry. Allow 'rescan' to run only the following command as root, without a password:

```
rescan ALL=(root) NOPASSWD: /usr/sbin/iscsiadm -m node -l
```

6. Connect to the appliance via Shell Terminal in a Text-based User Interface (TUI) or using a remote SSH terminal.

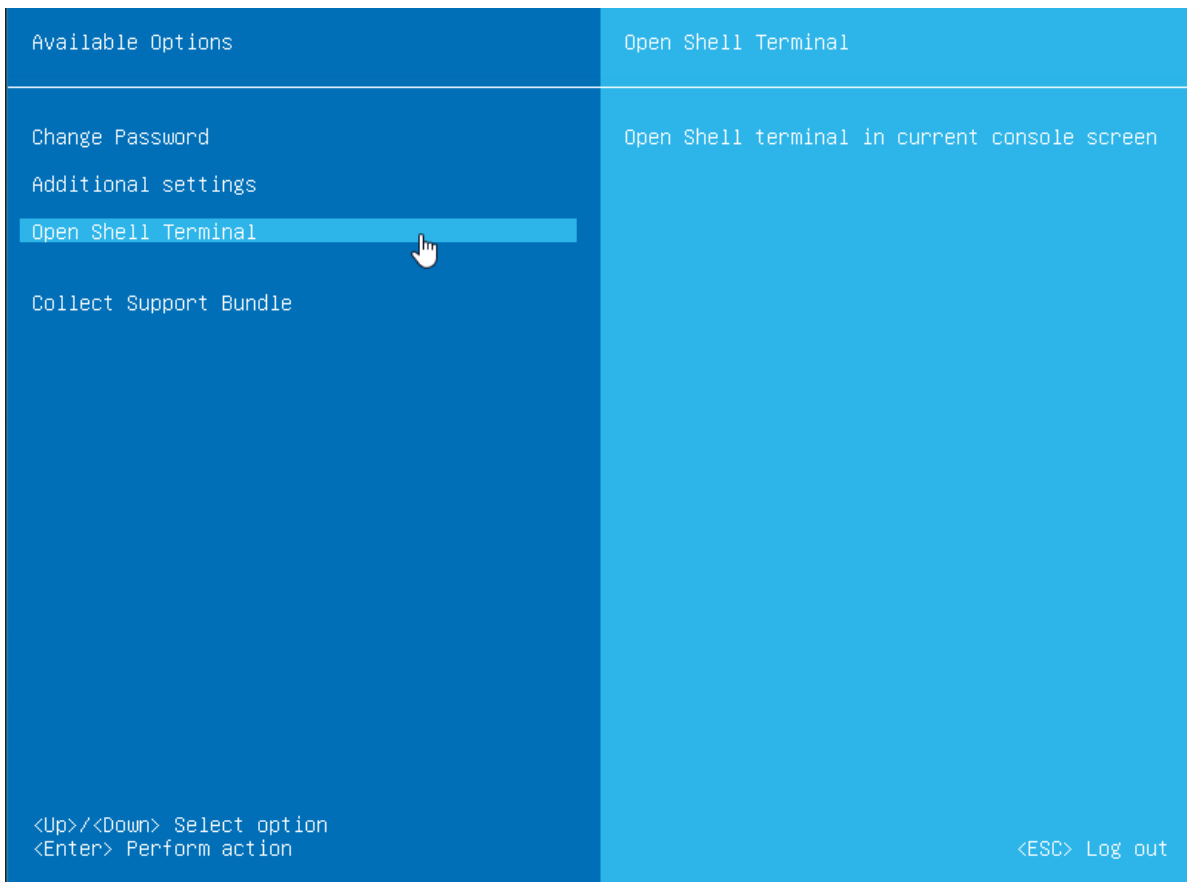

7. Edit file `/opt/starwind/starwind-virtual-san/drive_c/starwind/hba_rescan_config.py` with the following command:

```
sudo nano /opt/starwind/starwind-virtual-
san/drive_c/starwind/hba_rescan_config.py
```

8. In the appropriate lines, specify the IP address and login credentials of the single or multiple hosts on which the current StarWind VM is stored and will trigger the storage rescan task:

```
pve_host_list = ['SET_PVE_HOST_IP_1']
pve_username = 'SET_PVE_USER'
pve_password = 'SET_PVE_PASSWORD'
```

9. Search for `pve_command` with `iscsiadm` under PVE block > edit it by setting the script area to:

```
"sudo iscsiadm -m node -l"
```

Conclusion

Following this guide, a Proxmox Cluster was deployed and configured with StarWind Virtual SAN (VSAN) running in a CVM on each host. As a result, a virtual shared storage "pool" accessible by all cluster nodes was created for storing highly available virtual machines.

Contacts

US Headquarters	EMEA and APAC
 +1 617 829 44 95	 +44 2037 691 857 (United Kingdom)
 +1 617 507 58 45	 +49 800 100 68 26 (Germany)
 +1 866 790 26 46	 +34 629 03 07 17 (Spain and Portugal)
	 +33 788 60 30 06 (France)

Customer Support Portal: <https://www.starwind.com/support>

Support Forum: <https://www.starwind.com/forums>

Sales: sales@starwind.com

General Information: info@starwind.com



StarWind Software, Inc. 100 Cummings Center Suite 224-C Beverly MA 01915, USA
www.starwind.com ©2026, StarWind Software Inc. All rights reserved.